

2I740DW

**Intel® ATOM® Amston Lake x7000 series CPU,
Onboard LPDDR5,
3 x LAN / HDMI® / USB / COM/M.2**

All-In-One

**Intel® ATOM® Amston Lake x7000 series CPU,
Max 32GB Onboard LPDDR5, HDMI®,
2 x M.2, 1 x Nano SIM,
3 x 2.5 GbE, 5 x USB, 2 x COM,
Wide Range DC-IN 9~24V**

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS**

NO. 2I740DW

Release date: JUNE. 20. 2026

Contents

2I740DW

Warning!	1
Hardware Notice Guide	2
CHAPTER 1 GENERAL INFORMATION	4
1-1 MAJOR FEATURE	5
1-2 SPECIFICATION	6
1-3 DIRECTIONS FOR INSTALLING THE M.2 B KEY FOR PCIe x2 & USB 2.0	7
1-4 DIRECTIONS FOR INSTALLING THE M.2 B KEY FOR USB 3.2 GEN1 & USB 2.0 & SATA	8
CHAPTER 2 HARDWARE INSTALLATION	9
2-1 DIMENSION-2I740DW	9
2-2 LAYOUT-2I740DW-CONNECTOR AND JUMPER TOP	10
2-2-1 LAYOUT-2I740DW-CONNECTOR AND JUMPER BOT	11
2-3 LAYOUT-2I740DW-FUNCTION MAP TOP	12
2-3-1 LAYOUT-2I740DW-FUNCTION MAP BOT	13
2-4 DIAGRAM-2I740DW TOP	14
2-4-1 DIAGRAM-2I740DW BOT	15
2-5 FUNCTION MAP-2I740DW TOP	16
2-6 LIST OF JUMPERS	17
2-7 JUMPER SETTING DESCRIPTION	17
2-8 JSB1: CMOS DATA CLEAR	18
2-9 JAT1: POWER IN ALWAYS ON FUNCTION	19
CHAPTER 3 CONNECTION	20
3-1 LIST OF CONNECTORS	20
3-2 CMOS BATTERY CONNECTOR	21
3-3 USB INTERFACE	22
3-4 LAN INTERFACE	23
3-5 CL11.CL21.CL31: LAN SIGNAL OUT 2x4 PIN (2.0mm) WAFER (OPTION)	24
3-6 CLED1.CLED2.CLED3: LAN LED INDICATOR 1x4 PIN (1.0mm) WAFER (OPTION)	24
3-7 COM INTERFACE	25
3-8 SMBUS INTERFACE	26
3-9 CI2C1: I2C 1x4 PIN (1.25mm) WAFER	26
3-10 CPI1: DC POWER INPUT 2x4 PIN (2.0mm) WAFER (RED)	27
3-11 DISPLAY INTERFACE	28
3-12 SIM1: NANO SIM CARD PUSH-PUSH	29
3-13 NGFF1: PCI EXPRESS M.2 B KEY 2242 H=8.5 SOCKETS 75PIN	30
3-14 NGFF2: PCI EXPRESS M.2 B KEY 2242 / 3042 H=8.5 SOCKETS 75PIN	32
3-15 SW1: POWER BUTTON	33
CHAPTER 4 INTRODUCTION OF BIOS	34
4-1 ENTER SETUP	34

4-2 BIOS MENU SCREEN & FUNCTION KEYS	35
4-3 GETTING HELP	36
4-4 MENU BARS	36
4-5 MAIN	37
4-6 ADVANCED	38
4-6-1 SOC CONFIG CONFIGURATION	39
4-6-1-1 ACPI SETTINGS	40
4-6-1-2 CPU POWER LIMIT CONFIGURATION	42
4-6-1-3 SYSTEM AGENT (SA) CONFIGURATION	45
4-6-1-4 PCH-IO CONFIGURATION	47
4-6-1-4-1 PCI EXPRESS CONFIGURATION	49
4-6-1-4-2 SATA CONFIGURATION	52
4-6-1-5 PCH-FW CONFIGURATION	54
4-6-2 BOOT CONFIGURATION	56
4-6-3 ADVANCED PLATFORM CONFIGURATION	58
4-6-4 SIO F81804	64
4-6-4-1 UART PORT 1 CONFIGURATION	65
4-6-4-2 UART PORT 2 CONFIGURATION	69
4-6-4-3 HARWARE MONITOR	73
4-6-4-4 RESTORE ON POWER LOSS	74
4-7 SECURITY	75
4-8 POWER	79
4-9 BOOT	81
4-10 SAVE & EXIT	82
4-11 HOW TO UPDATE INSYDE BIOS	83
APPENDIX B: RESOLUTION LIST	84

Copyright

This manual is copyrighted and all rights are reserved. It does not allow any non authorization in copied, photocopied, translated or reproduced to any electronic or machine readable form in whole or in part without prior written consent from the manufacturer.

In general, the manufacturer will not be liable for any direct, indirect, special, incidental or consequential damages arising from the use of inability to use the product or documentation, even if advised of the possibility of such damages.

The manufacturer keeps the rights in the subject to change the contents of this manual without prior notices in order to improve the function design, performance, quality, and reliability. The author assumes no responsibility for any errors or omissions, which may appear in this manual, nor does it make a commitment to update the information contained herein.

Trademarks

Intel is a registered trademark of Intel Corporation.

Insyde is a registered trademark of Insyde Software, Inc.

All other trademarks, products and or product's name mentioned here are for identification purposes only, and may be trademarks and / or registered trademarks of their respective companies or owners.

© Copyright 2026

All Rights Reserved.

User Manual edition 0.1, JUNE. 2026

Warning !

1. **Battery**

Batteries on board are consumables.

The life time of them are not guaranteed.

2. **Fanless solution with HDD**

The specification & limitation of HDD should be considered carefully when the fanless solution is implemented.

3. We will not give further notification in case of changes of product information and manual.
4. SATA interface does not support Hot SWAP function.
5. There might be a 20% inaccuracy of WDT at room temperature.
6. Please make sure the voltage specification meets the requirement of equipment before plugging in.
7. There are two types of SSD, commercial grade and industrial grade, which provide different read/write speed performance, operation temperature and life cycle. Please contact sales for further information before making orders.
8. Caution! Please notice that the heat dissipation problem could cause the MB system unstable. Please deal with heat dissipation properly when buying single MB set.
9. Please avoid approaching the heat sink area to prevent users from being scalded with fanless products.
10. If users repair, modify or destroy any component of product unauthorizedly, We will not take responsibility or provide warranty anymore.
11. DO NOT apply any other material which may reduce cooling performance onto the thermal pad.
12. It is important to install a system fan toward the CPU to decrease the possibility of overheating / system hanging up issues, or customer is suggested to have a fine cooling system to dissipate heat from CPU.

* Hardware Notice Guide

1. Before linking power supply with the motherboard, please attach DC-in adapter to the motherboard first. Then plug the adapter power to AC outlet.
Always shut down the computer normally before you move the system unit or remove the power supply from the motherboard. Please unplug the DC-in adapter first and then unplug the adapter from the AC outlet.
Please refer photo 1 as standard procedures.
2. In case of using DIRECT DC-in (without adapter), please check the allowed range for voltage & current of cables. And make sure you have the safety protection for outer issues such as short / broken circuit, overvoltage, surge, lightning strike.
3. In case of using DC-out to an external device, please make sure its voltage and current comply with the motherboard specification.
4. The total power consumption is determined by various conditions (CPU / motherboard type, device, application, etc.). Be cautious to the power cable you use for the system, one with UL standard will be highly recommended.
5. It's highly possible to burn out the CPU if you change / modify any parts of the CPU cooler.
6. Please wear wrist strap and attach it to a metal part of the system unit before handling a component. You can also touch an object which is ground connected or attached with metal surface if you don't have wrist strap.
7. Please be careful to handle & don't touch the sharp-pointed components on the bottom of PCBA.
8. Remove or change any components from the motherboard will VOID the warranty of the motherboard.
9. Before you install / remove any components or even make any jumper setting on the motherboard, please make sure to disconnect the power supply first.
(follow the aforementioned instruction guide)
10. "POWERON after PWR-Fail" function must be used carefully as below:
When the DC power adaptor runs out of power, unplug it from the DC current;
Once power returns, plug it back after 5 seconds.
If there is a power outage, unplug it from the AC current, once power returns, plug it back after 30 seconds. Otherwise it will cause system locked or made a severe damage.


Remark 1:

Always insert / unplug the DC-in horizontally & directly to / from the motherboard. DO NOT twist, it is designed to fit snugly.


Moreover, erratic pull / push action might cause an unpredictable damage to the component & system unit.

Photo 1

Insert

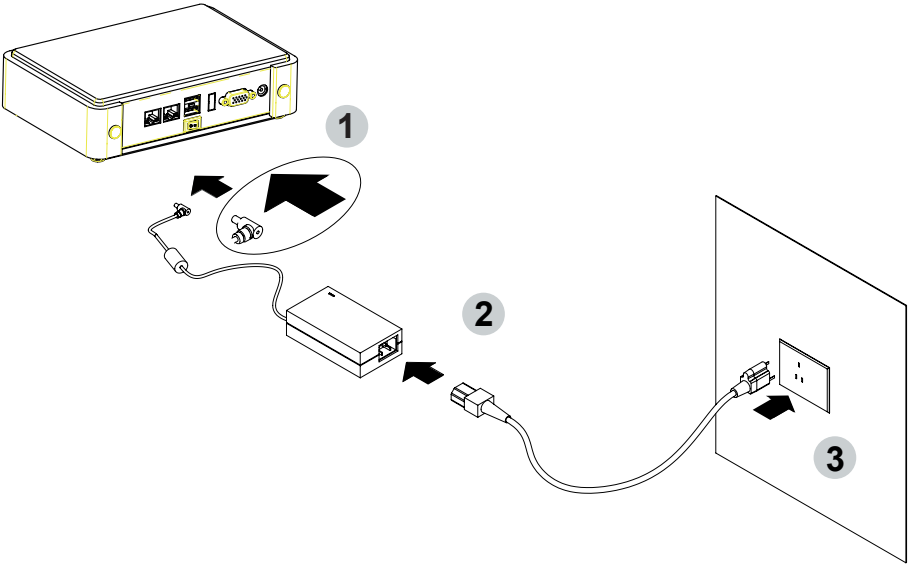

Unplug

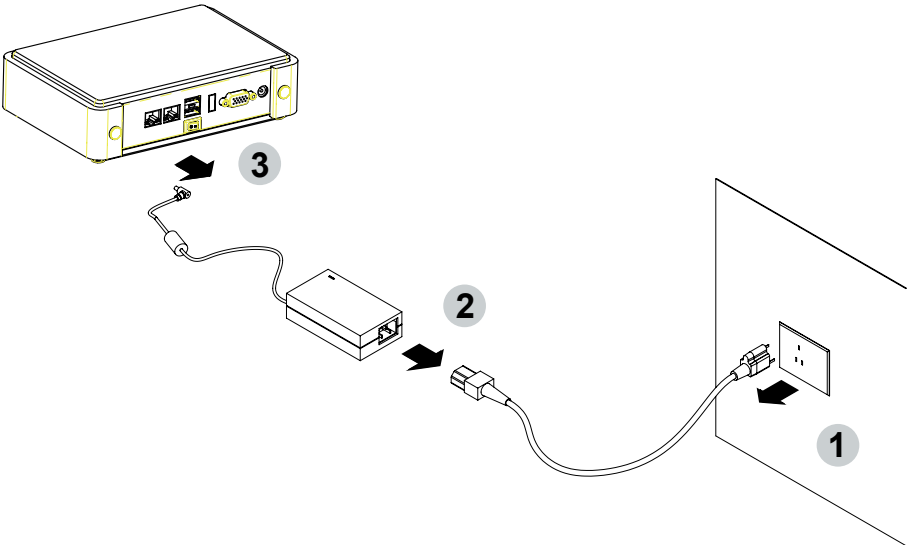

Chapter-1

General Information

The 2I740DW is a 2.5" (115.4 x 84.5 mm) motherboard powered with Intel® Amston Lake ATOM® x7000 series CPU & offered the ideal platform for high performance applications. The ultra compact (115.4 x 84.5 mm) motherboard with wide range 9~24V DC power input & embeds multiple Intel 2.5GbE LAN, USBs, COM Ports and HDMI display interface that offer the ideal platforms for high performance applications in Networking, Smart Automation, Machine Vision, In-vehicle, Industry 4.0 and any compact high-performance Internet of Things (IoT) applications

2I740DW integrated 3 x 2.5GbE LAN, 5 x USB, 2 x COM , HDMI® and 2 x M.2 expansion slot offers the ideal platform for graphics performance with integrated IoT features, real-time performance, manageability, and security. 2I740DW with excellent processor performance, multiple 2.5 Giga Ethernet ports and wide range 9-24V DC-IN features is the ideal solution for OpenVINO based AI accelerators platform and advanced Edge AI, Intelligent Control, Factory Automation Industry 4.0, Internet of Things (IoT) and Edge Computing Applications

The embedded motherboard 2I740DW is specially designed with Wide-Range Voltage DC in (9~24V) for widely varying input voltage requirement. All wafer IO design offers superb performance and PC specification in the industry using the specific housing. It supports with two 2.5Gbps Ethernet for seamless broadband connectivity. With Wake-On LAN function and the PXE function in BIOS, these are perfect control boards for networking devices.

The All-In-One motherboard 2I740DW is fully compatible with industry standards, plus technical enhancements and thousands of software applications developed for IBM PC/AT compatible computers. These control logic provides high-speed performance for the most advanced multi user and multitasking applications available

1-1 Major Feature


1. Intel® Amston Lake ATOM® x7000 series Processor
2. Intel® UHD Graphics for Intel® Atom x7000 series
3. Support HDMI max up to 4096 x 2160@60Hz
4. Onboard LPDDR5, max up to 32GB
5. Support 3 x 2.5 Gbps Intel LAN ports.
6. Support 2 x RS232 selectable to RS485 / RS422 by BIOS
7. 3 x USB 3.2 and 2 x USB 2.0
8. Support extended 1 x M.2 B-Key for PCIe x 2 and USB 2.0 interface, 1 x M.2 B-Key for SATA and USB 3.0 / 2.0 interface with Nano SIM,
9. Hardware Watch Dog Timer, 0~255 sec programmable
10. Wide Range DC IN +9V~24V

1-2 Specification


1. **SOC:** Intel® Amston Lake ATOM® x7000 series Processor
2. **Memory:** Onboard LPDDR5, max up to 32GB
3. **Graphics:** Intel® UHD Graphics for Intel® Atom x7000 series,
support HDMI max up to 4096 x 2160@60Hz
4. **LAN:** 3 Intel I226-V / I226-IT LAN chipset with 10 / 100 / 1000 / 2500 Mbps
for PCIe x 1 V2.1
5. **I/O Chip:** Switch chipset for 2 port RS232 / RS422 / RS485 selected by BIOS
6. **USB:** 3 type A USB 3.2, 2 USB 2.0 internal
7. **Expansion interface:** one M.2 B-Key for PCIe x 2 and USB 2.0 interface,
one M.2 B-key for SATA and USB 3.0 / 2.0 interface with Nano SIM.
8. **BIOS:** Insyde UEFI BIOS
9. **Dimension:** 115.4 x 84.5 mm
10. **Power:** On board DC +9~24V

1-3 Directions for installing the M.2B Key for PCIe x2 & USB 2.0

1. Unscrew the screw on the board

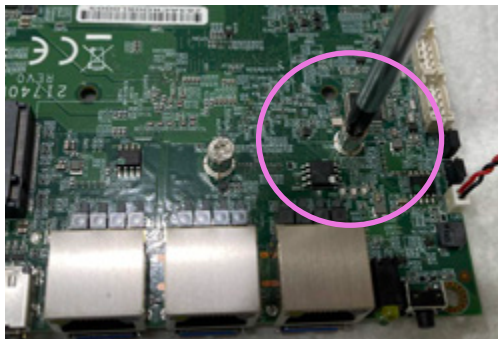

2. Plug in the Mini Card in a 45 angle

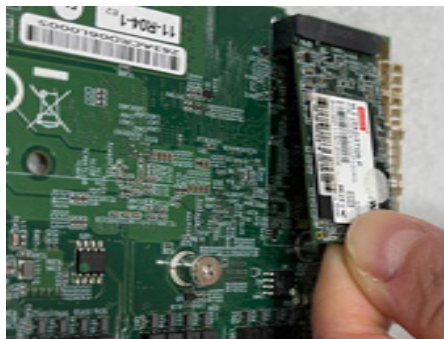

3. Gently push down the Mini Card and screw the screw back.



1-4 Directions for installing the M.2B Key for USB 3.2 Gen1 & USB 2.0 & SATA

1. Unscrew the screw on the board



2. Plug in the Mini Card in a 45 angle




3. Gently push down the Mini Card and screw the screw back.




Chapter-2

2-1 Dimension-2I740DW

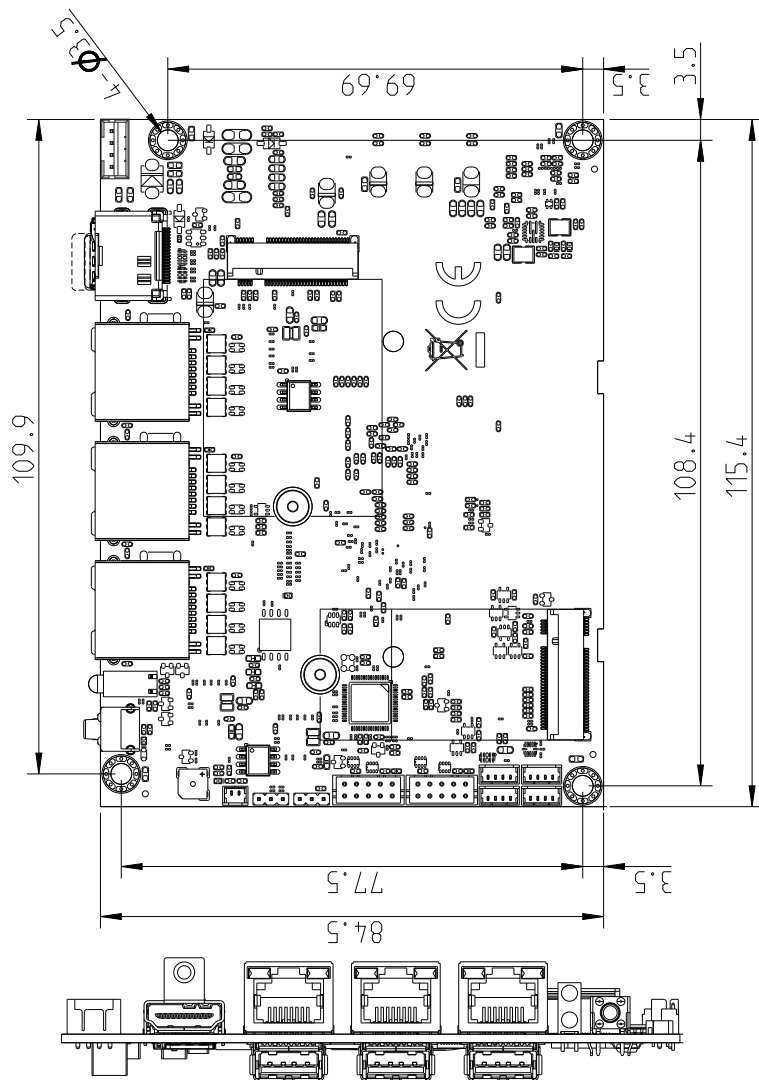


2-2 Layout-2I740DW-Connector and Jumper

TOP

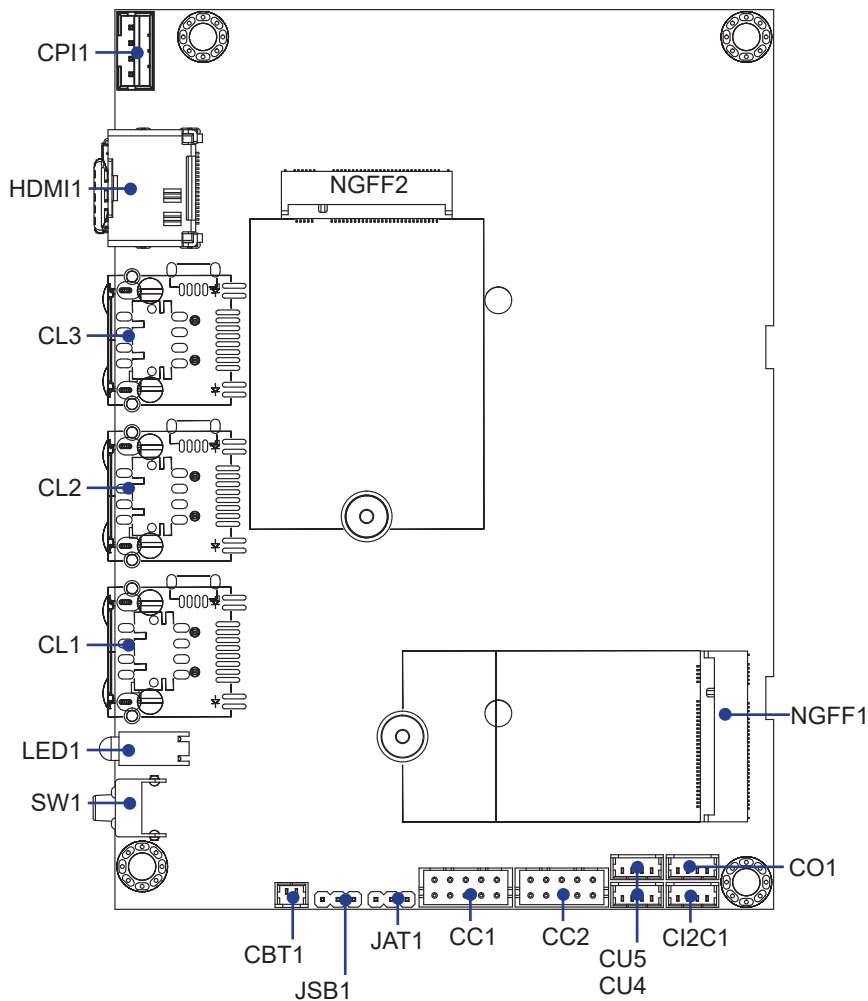


2-2-1 Layout-2I740DW-Connector and Jumper Bottom
BOT

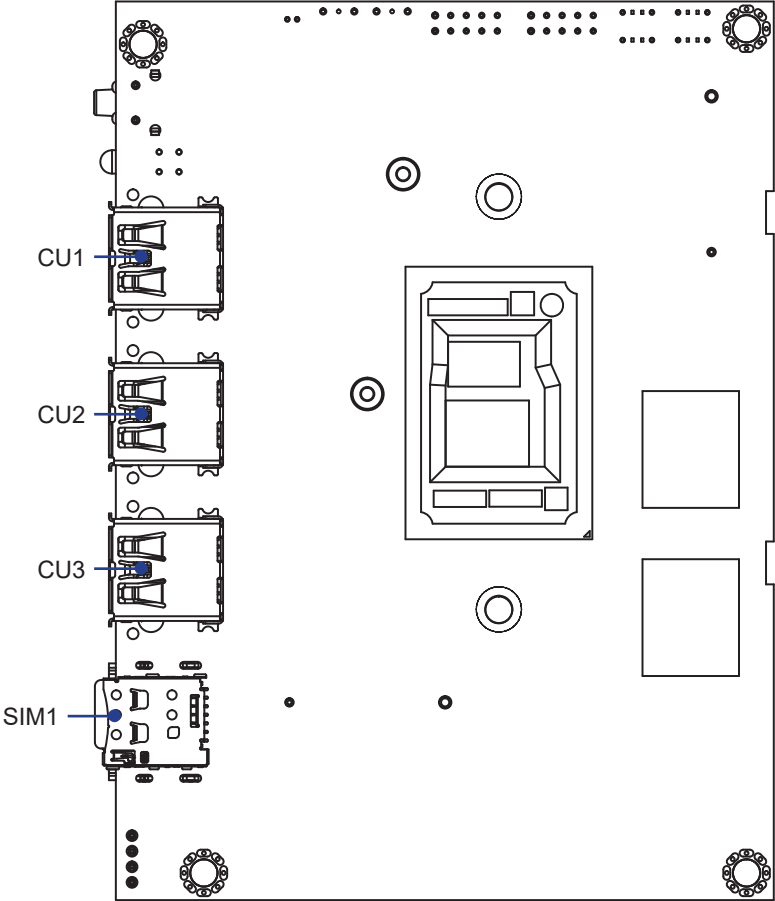


2-3 Layout-2I740DW-Function MAP

TOP

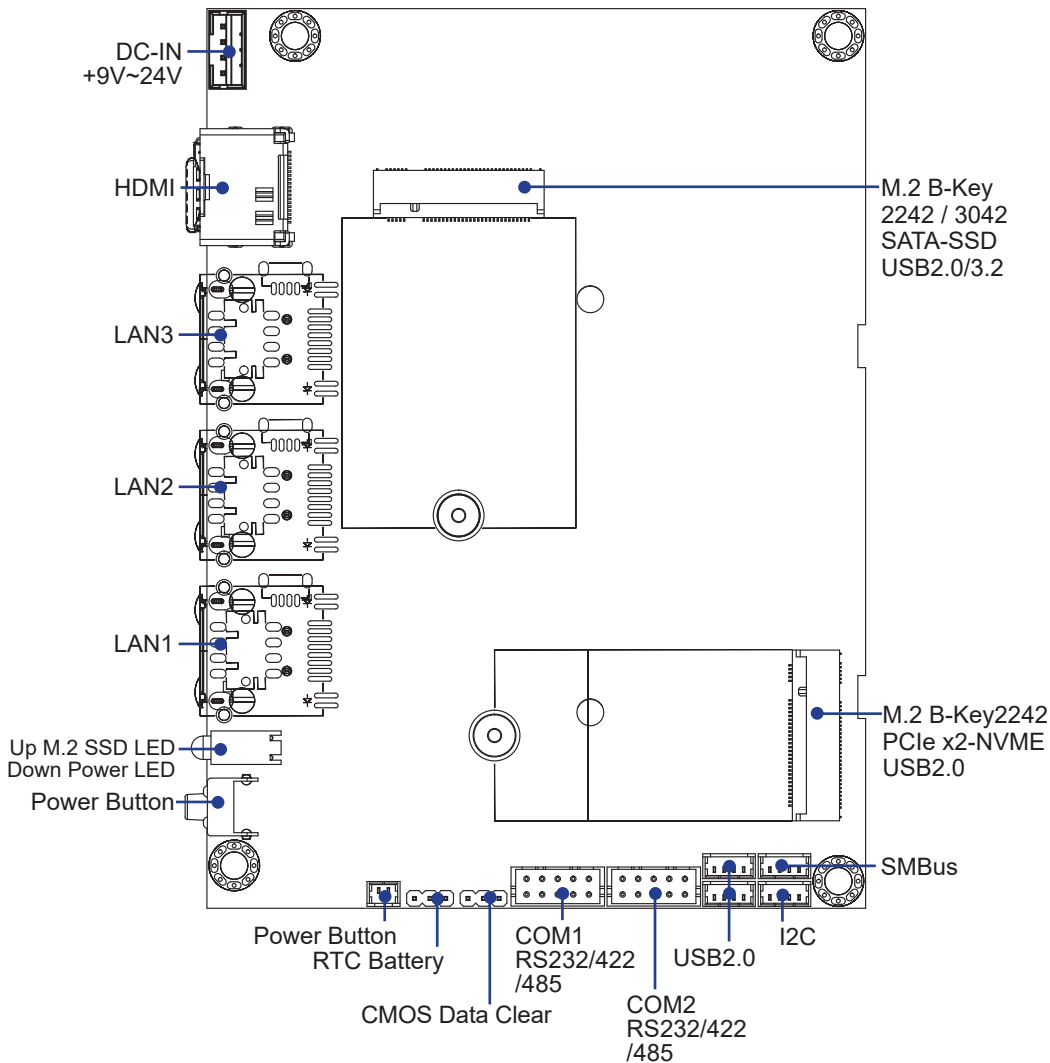


2-3-1 Layout-2I740DW-Function MAP

BOT

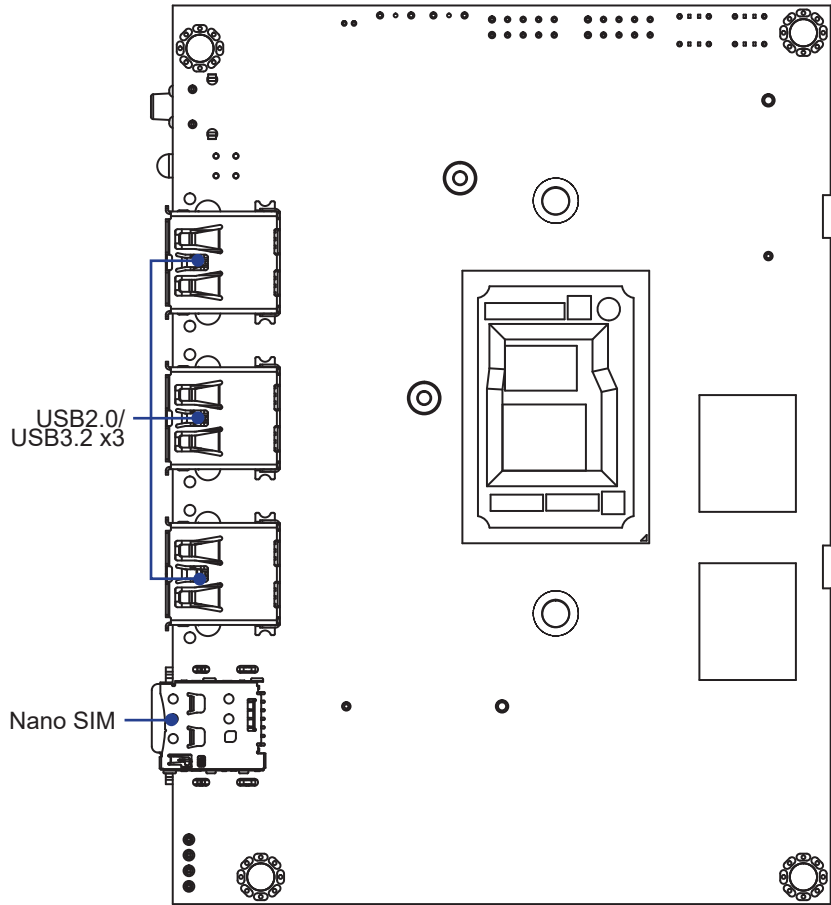


2-4 Diagram- 2I740DW

TOP

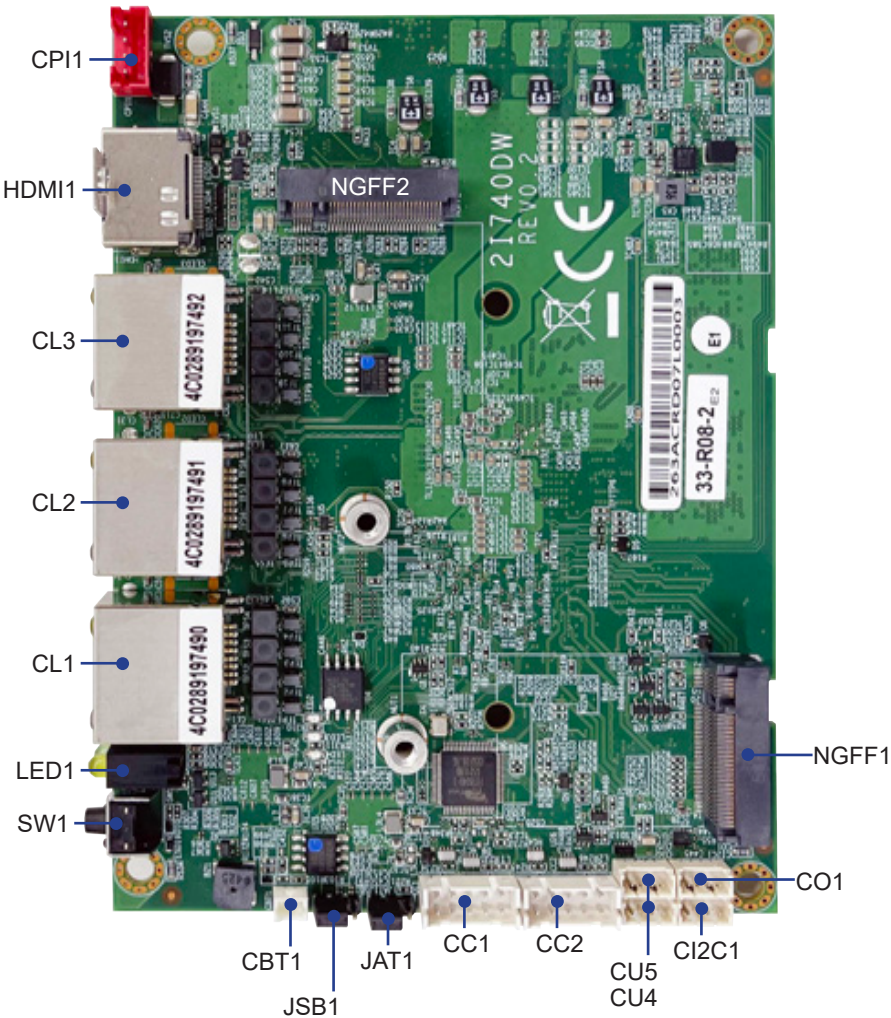


2-4-1 Diagram- 2I740DW
BOT

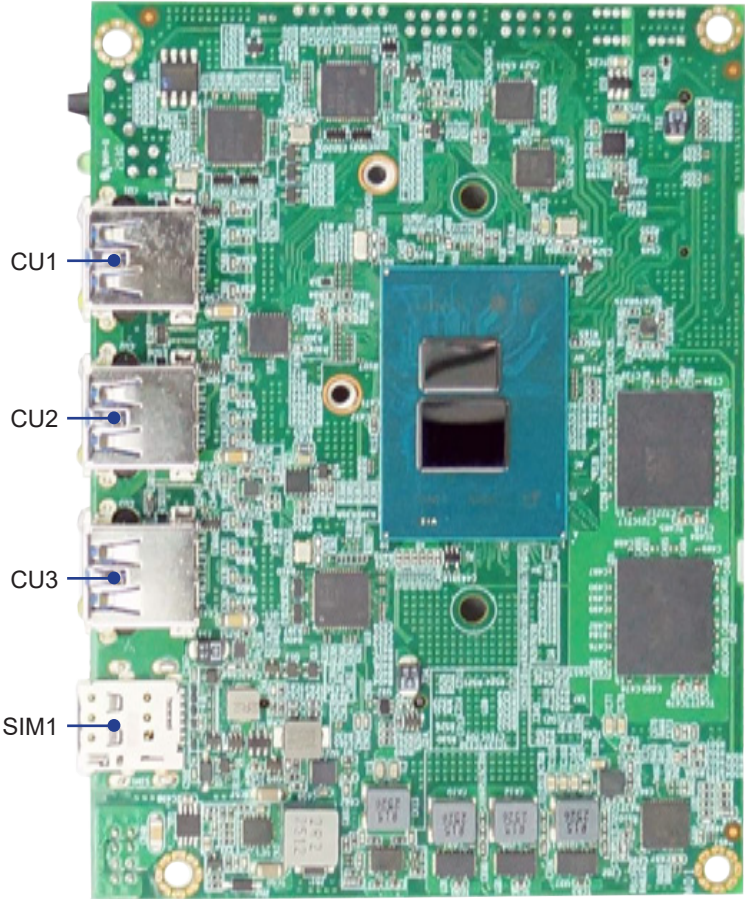

2-5 Function MAP- 2I740DW

TOP

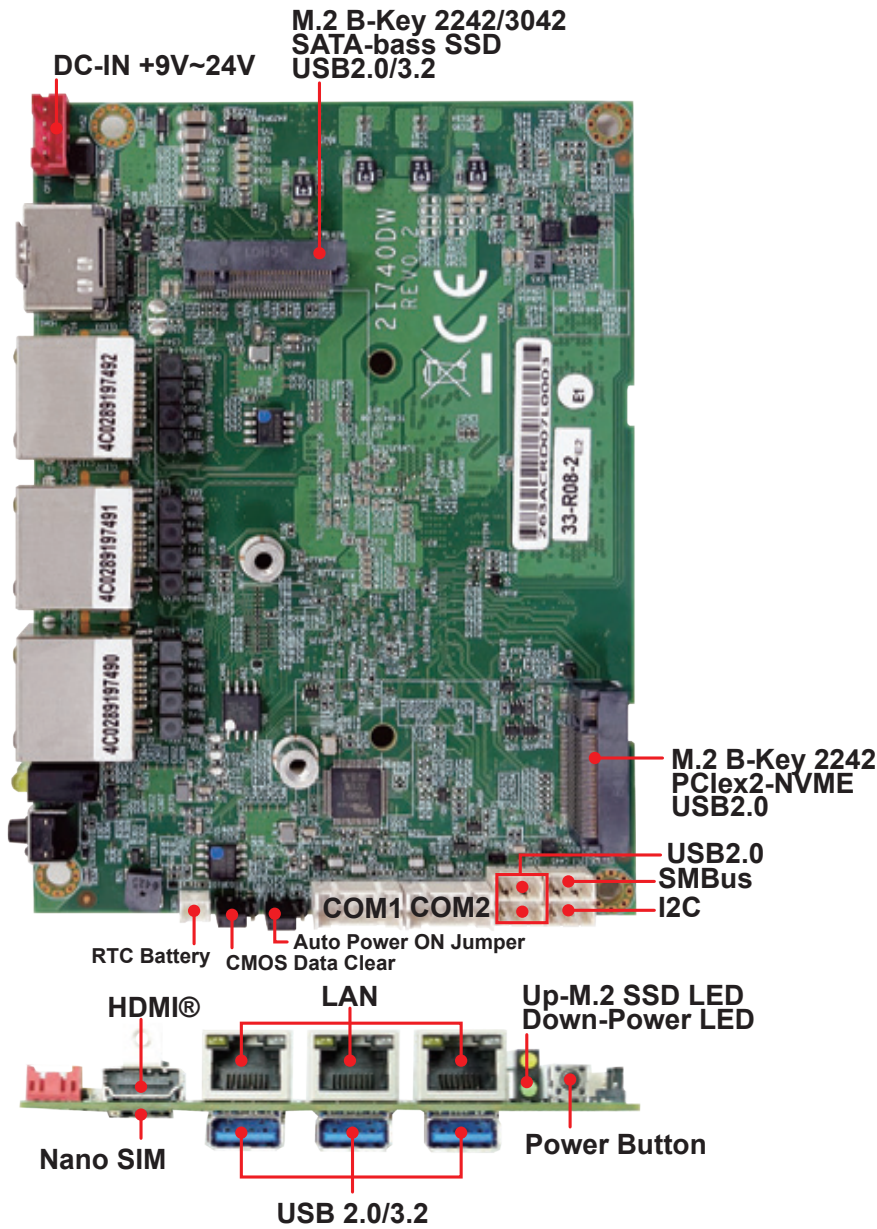

2-6 List of Jumpers

JSB1: CMOS DATA Clear

JAT1: Power in always ON function

2-7 Jumper Setting Description

A jumper is ON as a closed circuit with a plastic cap covering two pins. A jumper is OFF as an open circuit without the plastic cap. Some jumpers have three pins, labeled 1, 2, and 3. You could connect either pin 1 and 2 or 2 and 3.

The below figure 2.2 shows the examples of different jumper settings in this manual.

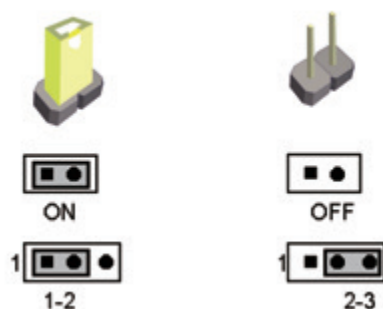


Figure 2.2

All jumpers already have its default setting with the plastic cap inserted as ON, or without the plastic cap as OFF. The default setting may be referred in this manual with a " * " symbol .

2-8 JSB1: CMOS DATA Clear

A battery must be used to retain the motherboard configuration in CMOS RAM.
Close Pin1 and pin 2 of JSB1 to store the CMOS data.


To clear the CMOS, follow the procedures below:

1. Turn off the system and unplug the AC power
2. Remove DC IN power cable from DC IN power connector
3. Locate JSB1 and close pin 1-2 for few seconds
4. Return to default setting by Close pin 1-2
5. Connect DC IN power cable back to DC IN Power connector

JSB1	DESCRIPTION
*1-2	Normal set
2-3	CMOS data clear

Note: Do not clear CMOS unless


- 1. Troubleshooting**
- 2. Forget password**
- 3. You fail over-clocking system**

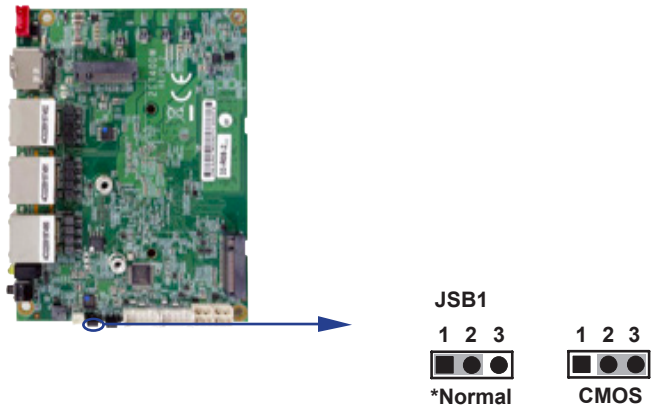

2-9 JAT1: Power in always ON function

JAT1	DESCRIPTION
*1-2	Disabled
2-3	Enable

NOTE: Power always on function default is disabled.

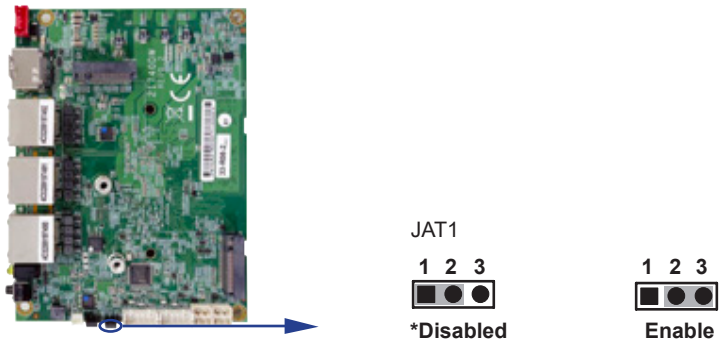

Chapter-3

Connection

This chapter provides all necessary information of the peripheral's connections, switches and indicators. Always power off the board before you install the peripherals.

3-1 List of Connectors

CBT1:	CMOS Battery in 1x2 pin (1.25mm) wafer
CU1:	USB 3.2 Gen 1x1 type A connector
CU2:	USB 3.2 Gen 1x1 type A connector
CU3:	USB 3.2 Gen 1x1 type A connector
CU4:	USB 2.0 port 1x4 pin (1.25mm) wafer
CU5:	USB 2.0 port 1x4 pin (1.25mm) wafer
CL1:	RJ45 LAN connector
CL2:	RJ45 LAN connector
CL3:	RJ45 LAN connector
CL11:	LAN port 2x4 pin (2.0mm) wafer (option)
CL21:	LAN port 2x4 pin (2.0mm) wafer (option)
CL31:	LAN port 2x4 pin (2.0mm) wafer (option)
CLED1:	LAN LED 1x4 pin (1.0mm) wafer (option)
CLED2:	LAN LED 1x4 pin (1.0mm) wafer (option)
CLED3:	LAN LED 1x4 pin (1.0mm) wafer (option)
CO1:	SMBus 1x4 pin (1.25mm) wafer
CI2C1:	I2C 1x4 pin (1.25mm) wafer
CPI1:	DC-IN 1x4 pin (2.0mm) Red wafer
NGFF1:	M.2 B key 2242 H=8.5 socket 75pin
NGFF2:	M.2 B key 2242 / 3042 H=8.5 socket 75pin
HDMI1:	HDMI typeA connector
SIM1:	Nano SIM card socket
SW1:	Power button


3-2 CMOS battery connector

• **CBT1: CMOS Battery in 1x2 pin (1.25mm) wafer**

PIN NO.	DESCRIPTION
1	Battery in (GND)
2	Battery in (+3V)

Note:


NOTE: CBT1 for external connector can extend battery capacity.

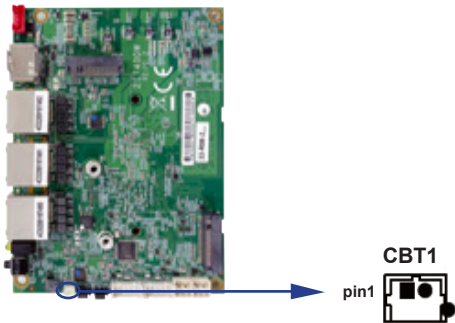

3-3 USB Interface


• CU1.CU2.CU3: USB3.2 Gen1 / 2.0 Type A connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
		1	USB3.2 TX+
1	+5V		
2	USB 2.0 D-	2	USB3.2 TX-
		3	GND
3	USB 2.0 D+	4	USB3.2 RX+
4	GND		
		5	USB3.2 RX-

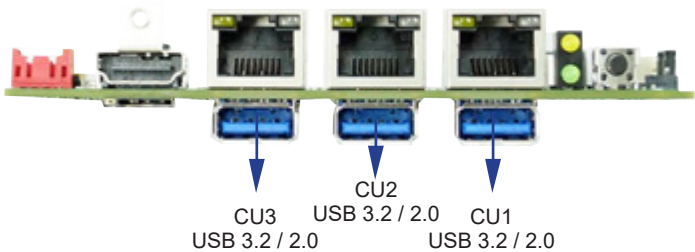

• CU4.CU5: USB 2.0 1x4 pin (1.25mm) wafer

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	+5V	2	DATA-
3	DATA+	4	GND

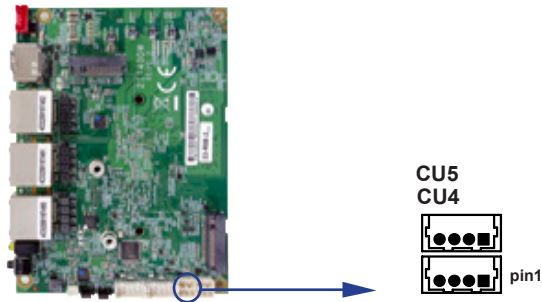


3-4 LAN Interface

• **CL1 / CL2 / CL3: RJ45 LAN Connector**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	TD0+/TX+	2	TD0-/TX-
3	TD1+/RX+	4	TD2+/NC
5	TD2-/NC	6	TD1-/RX-
7	TD3+/NC	8	TD3-/NC

• **RJ45 LAN Connector-LED define 2.5Giga / 1000 / 100Mb Connector**

Speed	100 Mbps		1000 Mbps		2.5 Gbps	
Indicate	Link LED	Active LED	Link LED	Active LED	Link LED	Active LED
Light						

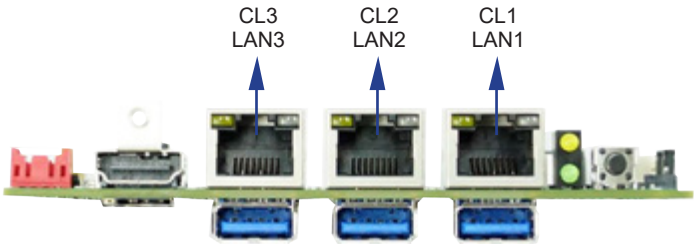

3-5 CL11.CL21.CL31: LAN signal out 2x4 pin (2.0mm) wafer (option)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	TR0-	2	TR0+
3	TR2+	4	TR1+
5	TR1-	6	TR2+
7	TR3-	8	TR3+

3-6 CLED1.CLED2.CLED3:
LAN LED indicator 1x4 pin (1.0mm) wafer(option)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC	2	Speed 100M
3	Speed 1G	4	Speed 2.5G

3-7 COM interface

● CC1.CC2: COM1 / COM2 2x5 pin (2.0mm) wafer

● (RS232 Mode)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI	10	+5V


- Note: 1. COM 1/2 Default RS232, RS485 / RS422 by BIOS control.
2. The pin9 RI can be modify to Power to supply device.
 The power voltage can be set +5V.
 The RI change Voltage function set by BOM control. Default is RI signal.
3. Pin 10 provides +5V for external device.

● (RS485 Mode)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Data-	2	Data+
3	NC	4	NC
5	GND	6	NC
7	NC	8	NC
9	NC	10	+5V

● (RS422 Mode)


PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	TX-	2	TX+
3	RX+	4	RX-
5	GND	6	NC
7	NC	8	NC
9	NC	10	+5V

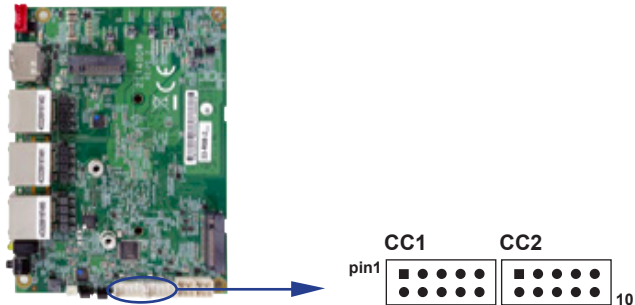

3-8 SMBus Interface


• CO1: SMBus 1x4 pin (1.25mm) wafer

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	+3.3V	2	GND
3	SMB-Clock	4	SMB-Data

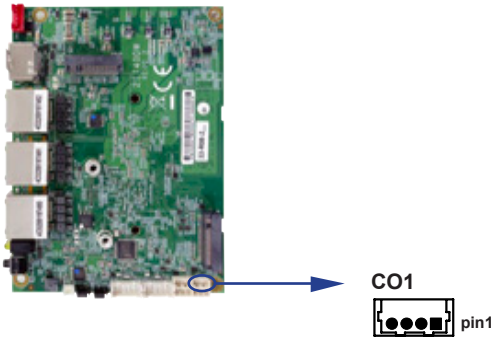

3-9 CI2C1: I2C 1x4 pin (1.25mm) wafer


PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	+3.3V	2	GND
3	I2C-Clock	4	I2C-Data

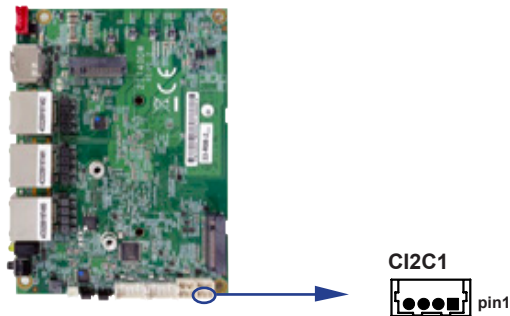

3-10 CPI1: DC Power input 1x4 pin (2.0mm) wafer (RED)

PIN NO.	DESCRIPTION
1,4	GND
2,3	DC-IN

Note: Very important check DC-in Voltage.

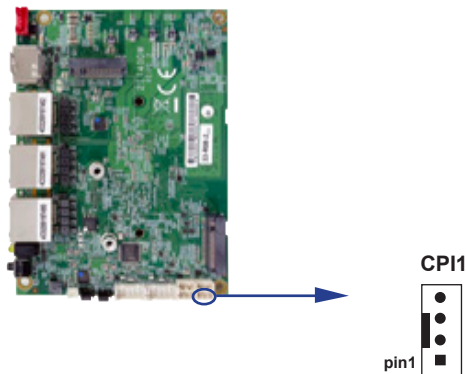

3-11 Display Interface

• HDMI1: HDMI type A connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	TMDS DATA2+	2	GND
3	TMDS DATA2-	4	TMDS DATA1+
5	GND	6	TMDS DATA1-
7	TMDS DATA0+	8	GND
9	TMDS DATA0-	10	TMDS CLK+
11	GND	12	TMDS CLK-
13	NC	14	NC
15	DDC CLOCK	16	DDC DATA
17	GND	18	+5V
19	H.P. Detect		



3-12 SIM1: Nano SIM Card Push-Push

• Follow ISO 7816-2 Smart Card Standard.

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC	2	RST
3	CLK	4	NC
5	GND	6	VPP
7	DATA	8	NC




3-13 NGFF1: PCI Express M.2 B key 2242 H=8.5 socket 75pin

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	+3.3V
3	GND	4	+3.3V
5	GND	6	FULL_CARD_PWR
7	USB2.0_P	8	NC
9	USB2.0_N	10	M2_LED
11	GND		
B Key notch			
		20	NC
21	GND	22	NC
23	NC	24	NC
25	NC	26	NC
27	GND	28	NC
29	PCIE10_RX_DN	30	NC
31	PCIE10_RX_DP	32	NC
33	GND	34	NC
35	PCIE10_TX_DN	36	NC
37	PCIE10_TX_DP	38	NC
39	GND	40	NC
41	PCIE9_RX_DN	42	NC
43	PCIE9_RX_DP	44	NC
45	GND	46	NC
47	PCIE9_TX_DN	48	NC
49	PCIE9_TX_DP	50	M2_PRST_N
51	GND	52	SRCCCLKREQ_N
53	CLK_SRC3_DN	54	NC
55	CLK_SRC3_DP	56	NC
57	GND	58	NC

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
59	NC	60	NC
61	NC	62	NC
63	NC	64	NC
65	NC	66	NC
67	NC	68	NC
69	NC	70	+3.3V
71	GND	72	+3.3V
73	GND	74	+3.3V
75	NC		

Note: Supports PCIe-SSD (NVME) & USB2.0 signal.

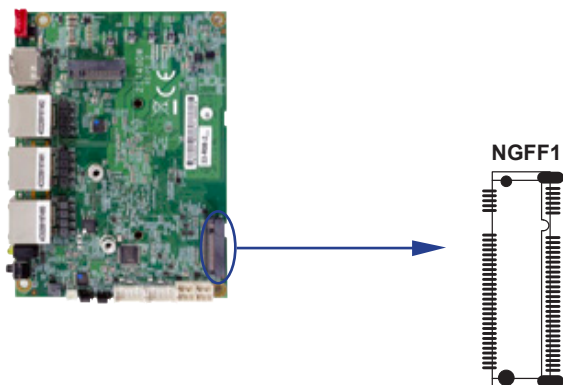


3-14 NGFF2: PCI Express M.2 B key 2242/3042 H=8.5 socket 75pin

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	SATA/USB3.0 PW config	2	+3.3V / +3.7V
3	GND	4	+3.3V / +3.7V
5	GND	6	FULL_CARD_PWR
7	USB2.0_P	8	W_DISABLE_1
9	USB2.0_N	10	M2_LED
11	GND		
B Key notch			
		20	NC
21	GND	22	NC
23	NC	24	NC
25	NC	26	W_DISABLE_2
27	GND	28	NC
29	USB3Rn	30	SIM_RST_M2
31	USB3Rp	32	SIM_CLK_M2
33	GND	34	SIM_DATA_M2
35	USB3Tn	36	SIM_PWR_M2
37	USB3Tp	38	SIM_RST_M2
39	GND	40	NC
41	SATA-RX+	42	NC
43	SATA-RX-	44	NC
45	GND	46	NC
47	SATA-TX-	48	NC
49	SATA-TX+	50	PREST
51	GND	52	NC
53	NC	54	NC
55	NC	56	NC
57	GND	58	NC
59	NC	60	NC

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
61	NC	62	NC
63	NC	64	NC
65	NC	66	SIM_DET
67	MD_RESET_N	68	NC
69	NC	70	+3.3V / +3.7V
71	GND	72	+3.3V / +3.7V
73	GND	74	+3.3V / +3.7V
75	NC		

Note:

1. 4G LTE device VCC voltage is +3.7V.
2. Support USB 3.1 / USB 2.0 & SATA signal.

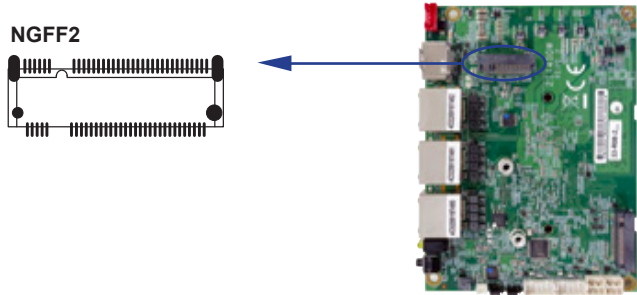

3-15 SW1: Power Button

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	GND
3	PW_BN	4	GND

Note: Can changed reset by BOM control.



Chapter-4

Introduction of BIOS

The BIOS is a program located in the Flash Memory on the motherboard.

This program is a bridge between motherboard and operating system.

When you start the computer, the BIOS program gains control.

The BIOS first operates an auto-diagnostic test called POST (Power on Self Test) for all the necessary hardware, it detects the entire hardware devices and configures the parameters of the hardware synchronization. After these tasks are completed, BIOS will give control of the computer back to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate with, it is the key factor of system stability and of ensuring your system performance at best.

In the BIOS Setup main menu, you can see several options. We will explain these options in the following pages. First, let us see the function keys you may use here:

Press <Esc> to quit the BIOS Setup.

Press ↑↓←→ (up, down, left, right) to choose the option you want to confirm or modify.

Press <F10> to save these parameters and to exit the BIOS Setup menu after you complete the setup of BIOS parameters.


Press Page Up/Page Down or +/- keys to modify the BIOS parameters for the active option.

4-1 Enter Setup

Power on the computer and press key immediately to enter Setup.

If the message disappears before your respond but you still wish to enter Setup, restart the system by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart the system by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys.

4-2 BIOS Menu Screen & Function Keys

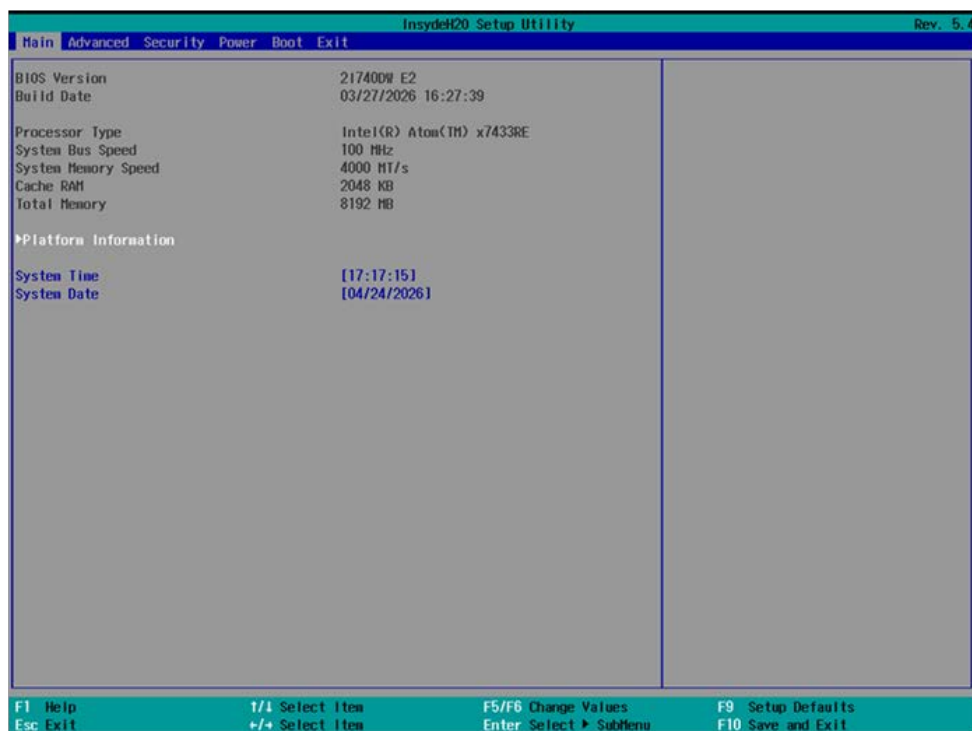


In the above BIOS Setup main menu of, you can see several options.

We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- Press >< (right, left) to select screen
- Press ↑↓ (up, down) to choose, in the main menu, the option you want to confirm or to modify.
- Press <Enter> to select.
- Press <+>/<-> or <F5>/<F6> keys when you want to modify the BIOS parameters for the active option.
- [F1]: General help.
- [F2]: Previous values.
- [F3]: Optimized defaults.
- [F4]: Save & Reset.
- Press <Esc> to quit the BIOS Setup.

4-3 Getting Help

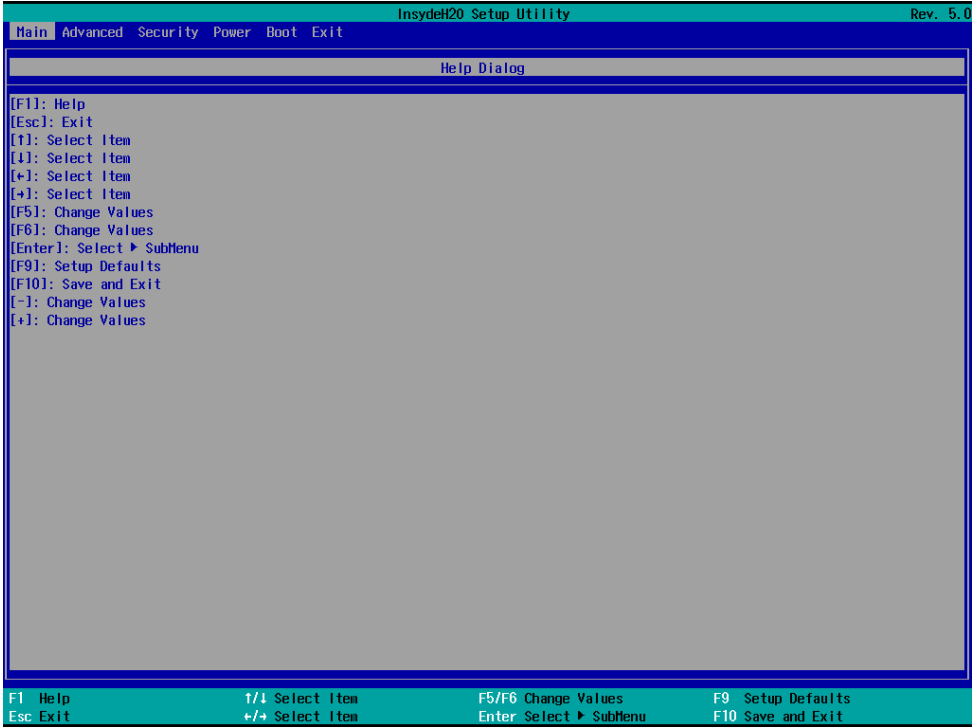

Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press <Esc>.

4-4 Menu Bars

There are six menu bars on top of BIOS screen:

Main To change system basic configuration

Advanced To change system advanced configuration

Chipset To change PCH IO configuration

Security Password settings


Boot Quiet boot or boot from USB selected.

Save & Exit Save setting, loading and exit options.

User can press the right or left arrow key on the keyboard to switch from menu bar.

The selected one is highlighted.

4-5 Main

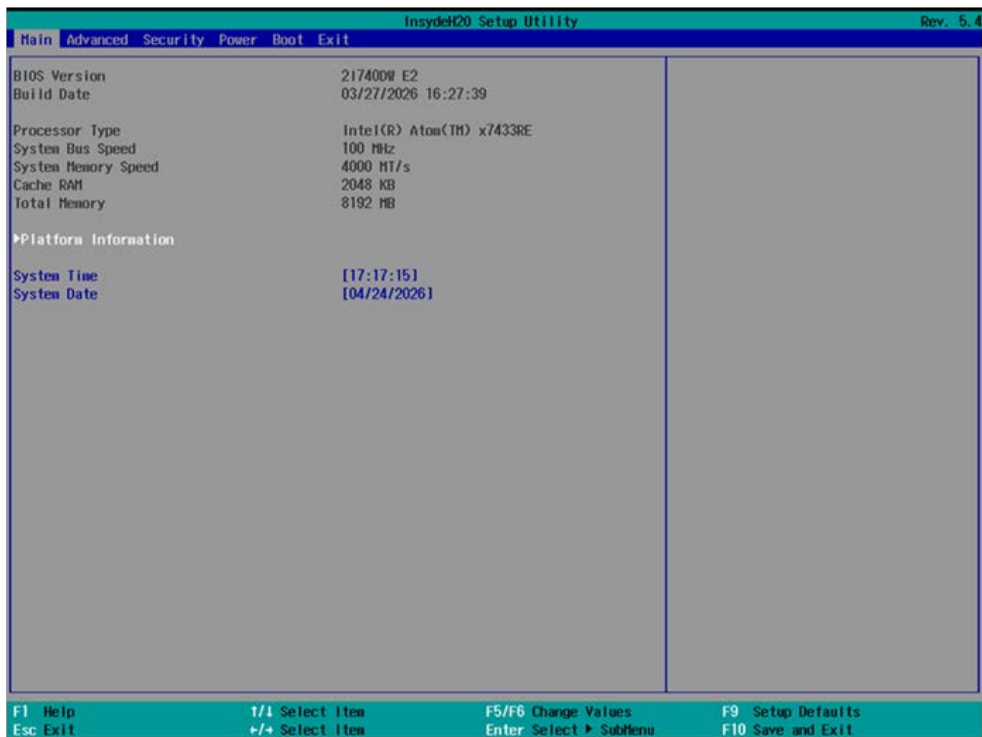

Main menu screen includes some basic system information. Highlight the item and then use the <+> or <-> and numerical keyboard keys to select the value you want in each item.


System Date

Set the Date. Please use [Tab] to switch between data elements.

System Time

Set the Time. Please use [Tab] to switch between data elements.

4-6 Advanced

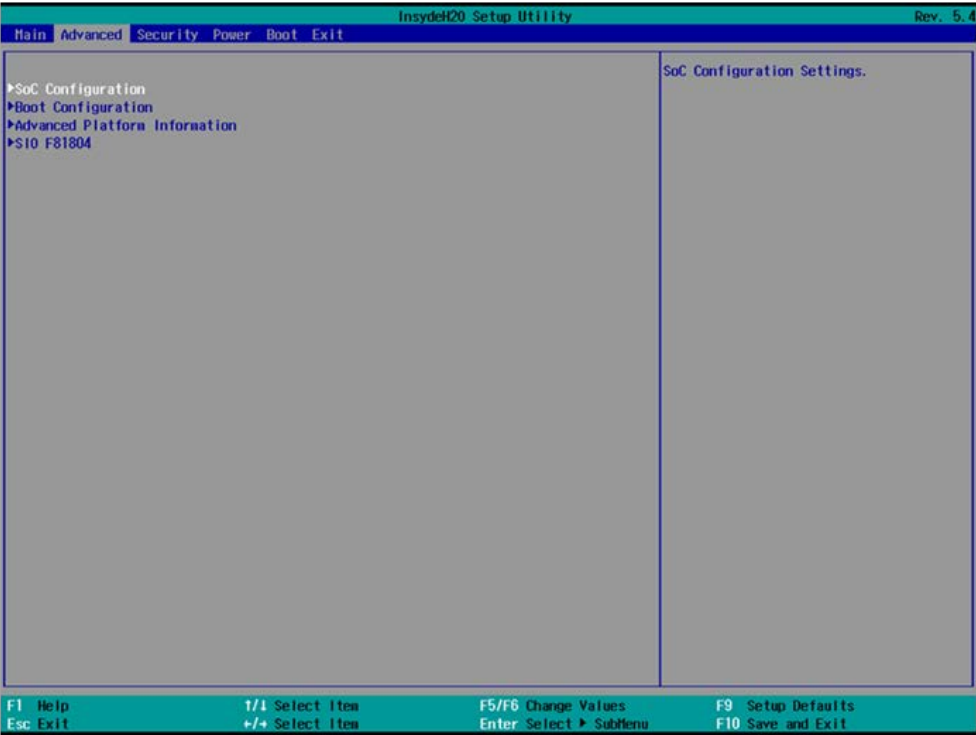

SOC Config Configuration

Please refer section 4-6-1

Boot Configuration

Please refer section 4-6-2


Advanced Platform Information

Please refer section 4-6-3

SIO F81804

Please refer section 4-6-4

4-6-1 SoC Config Configuration

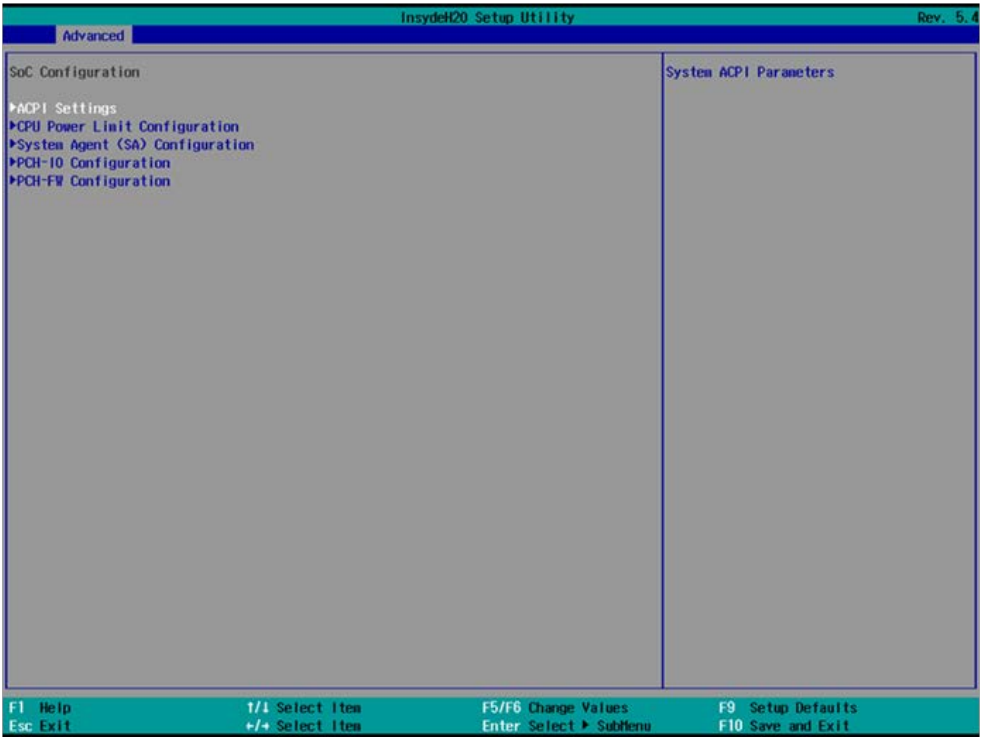

ACPI Settings

Please refer section 4-6-1-1

CPU Power Limit Configuration

Please refer section 4-6-1-2

System Agent (SA) Configuration

Please refer section 4-6-1-3


PCH-IO Configuration

Please refer section 4-6-1-4

PCH-FW Configuration


Please refer section 4-6-1-5

4-6-1-1 ► ACPI Settings

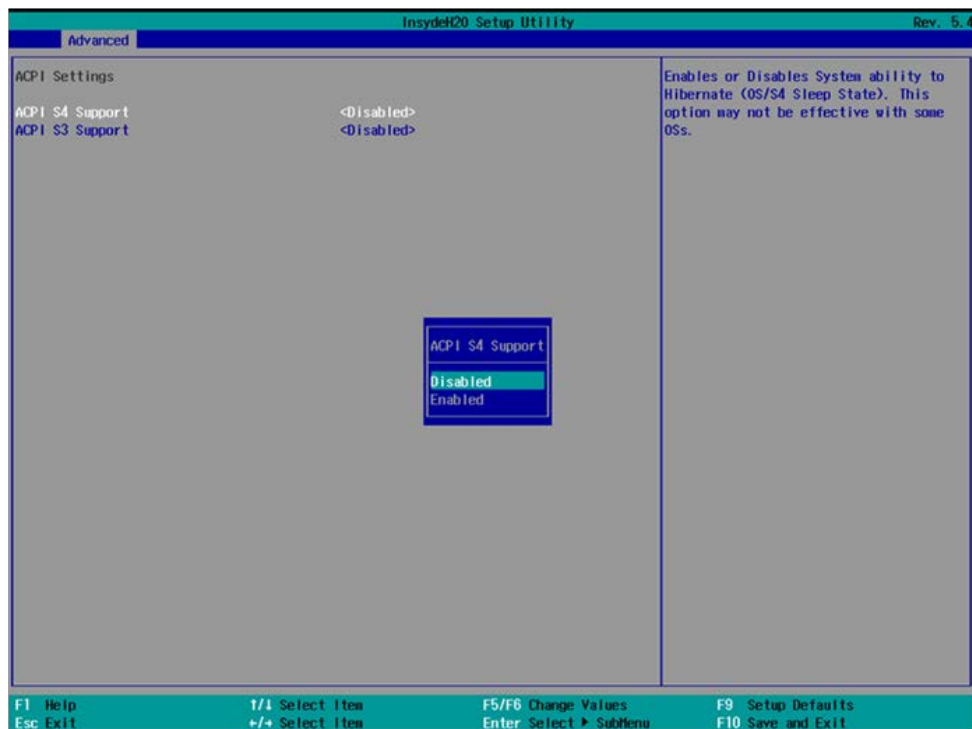

ACPI S4 Support

To select ACPI S4 (suspend to disk) support. The optional settings:
Enabled or Disabled (default)

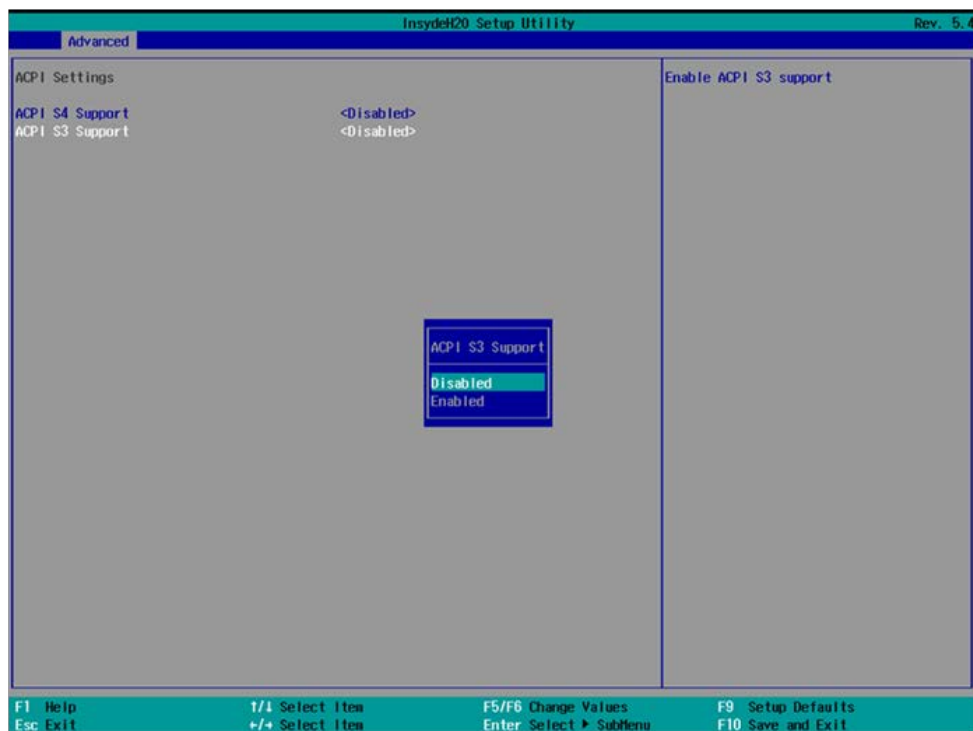


ACPI S3 Support

To select ACPI S3 (sleep state) support. The optional settings: Enabled or Disabled (default)


4-6-1-2 ► CPU Power Limit Configuration

InsydeH20 Setup Utility		Rev. 5.4		
Advanced				
Current Power Limit Settings		Enable/Disable Power Limit 1 override. If this option is disabled, BIOS will program the default values for Power Limit 1 and Power Limit 1 Time Window.		
Package TDP Limit	6.0			
Power Limit 1	6.0			
Power Limit 2	25.0			
Power Limit 1 Override	<Disabled>			
Power Limit 2 Override	<Enabled>			
Power Limit 2	[0]			
F1 Help		T/1 Select Item	F5/F6 Change Values	F9 Setup Defaults
Esc Exit		+/- Select Item	Enter Select ► SubItem	F10 Save and Exit

The setting follows INTEL Atom® x7211RE Processor power limit default configuration.

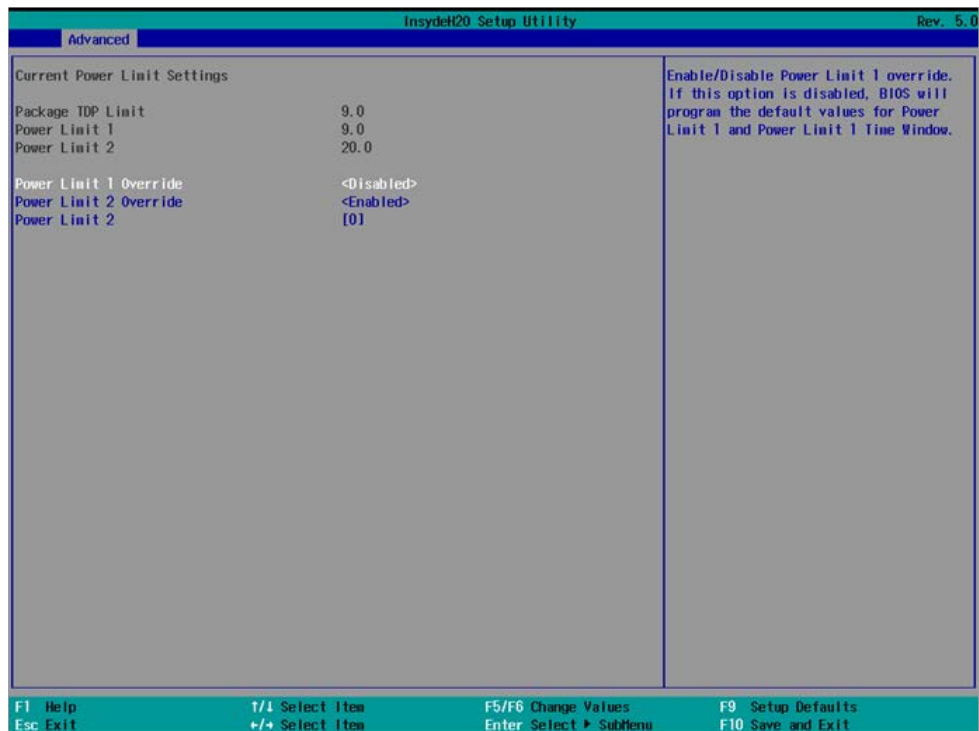


The setting follows INTEL Atom x6413E power limit default configuration.

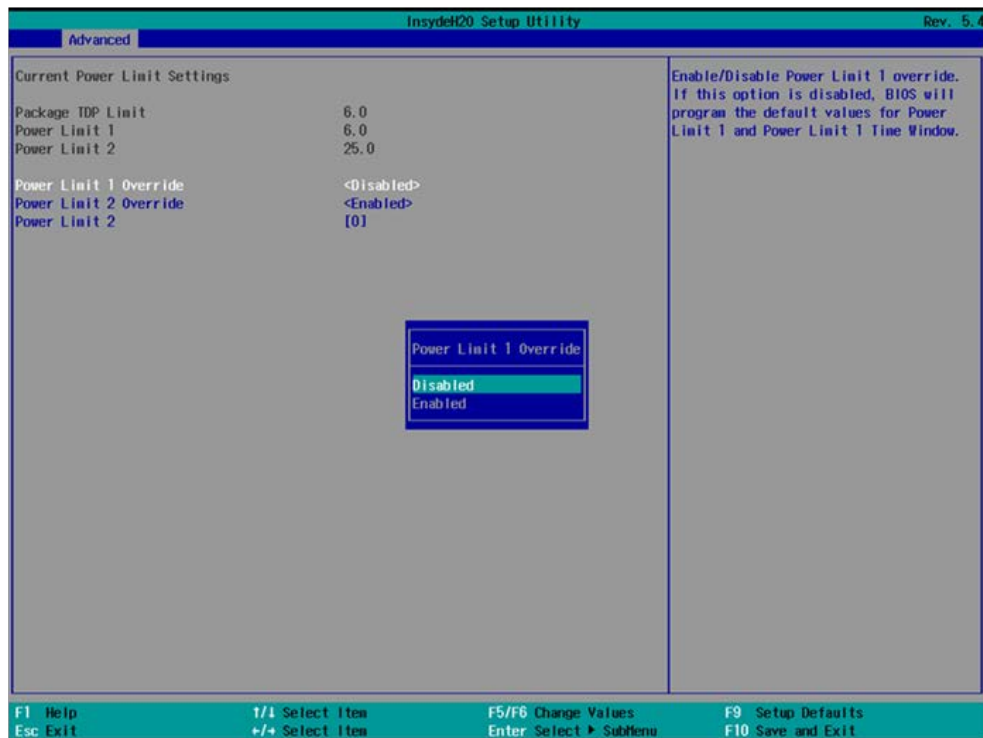


Power Limit Override

Enable / disable PL1 / PL2 and enter the power numerical value from 0 to 20000 to get higher or lower CPU TDP


4-6-1-3 ► System Agent (SA) Configuration

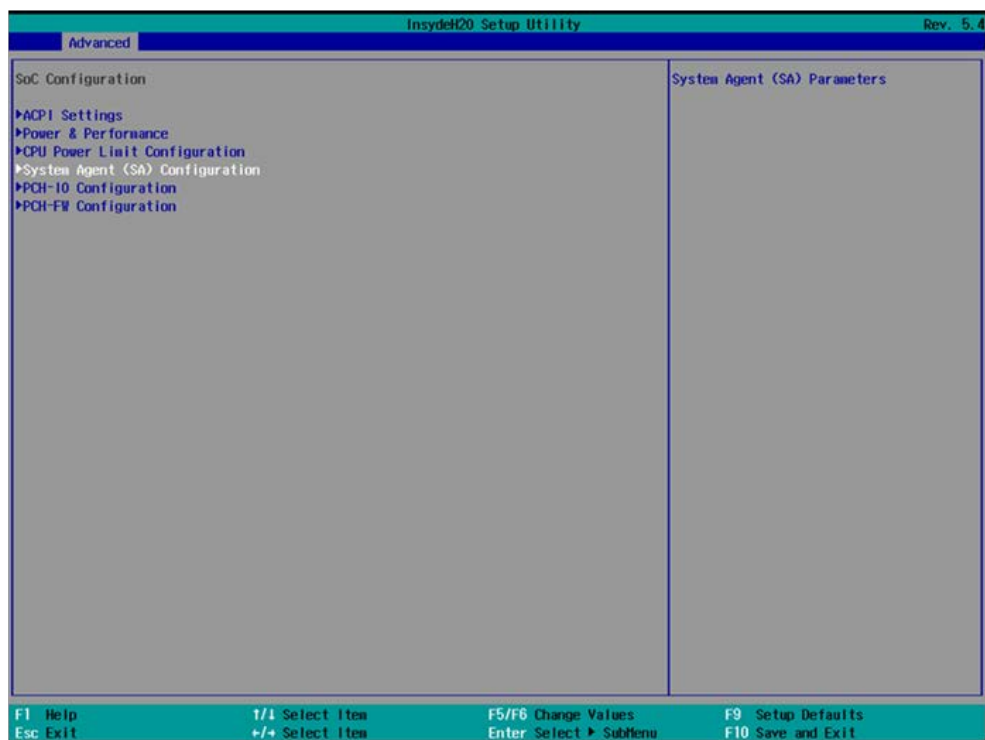


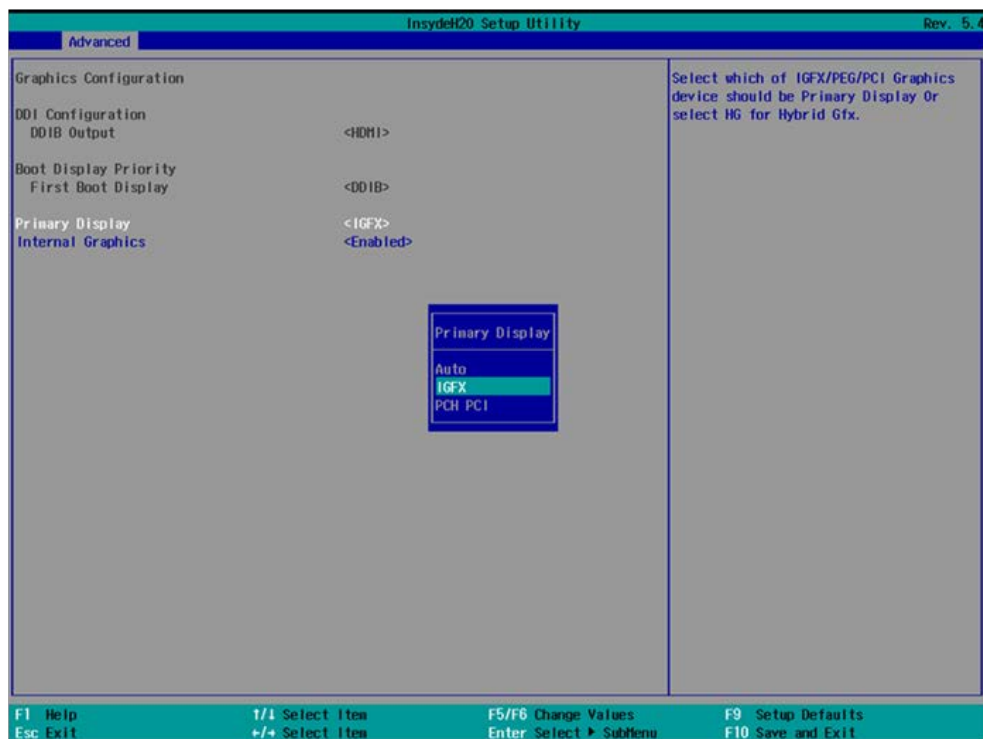

Primary Display. The optional settings are: Auto, IGFX, PCH PCI

4-6-1-4► PCH-IO Configuration

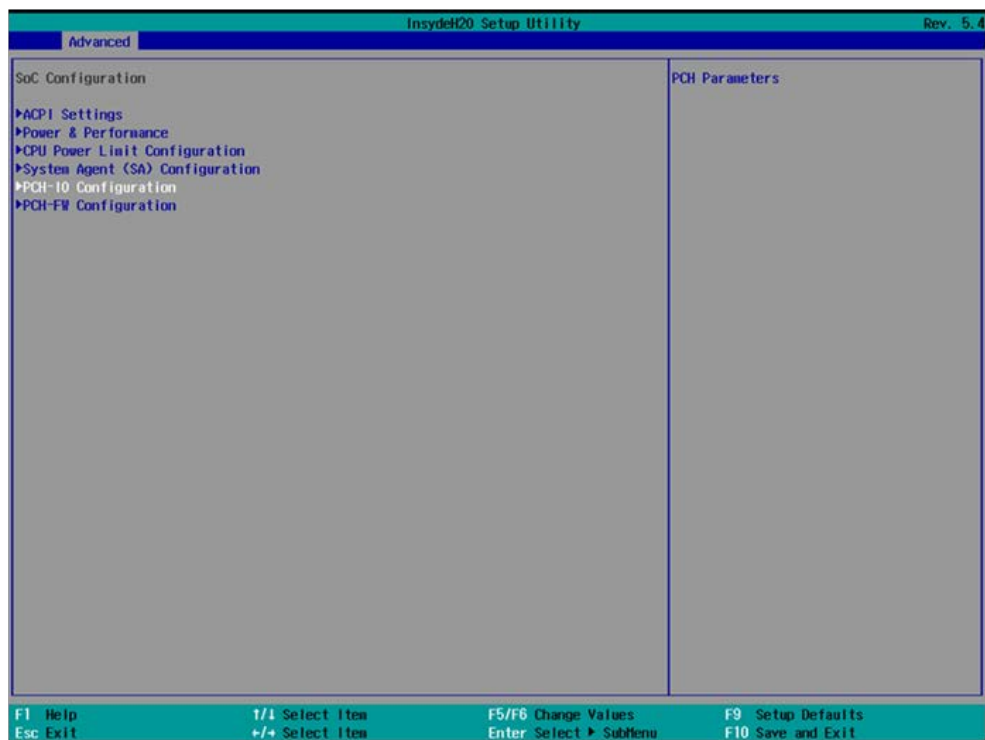

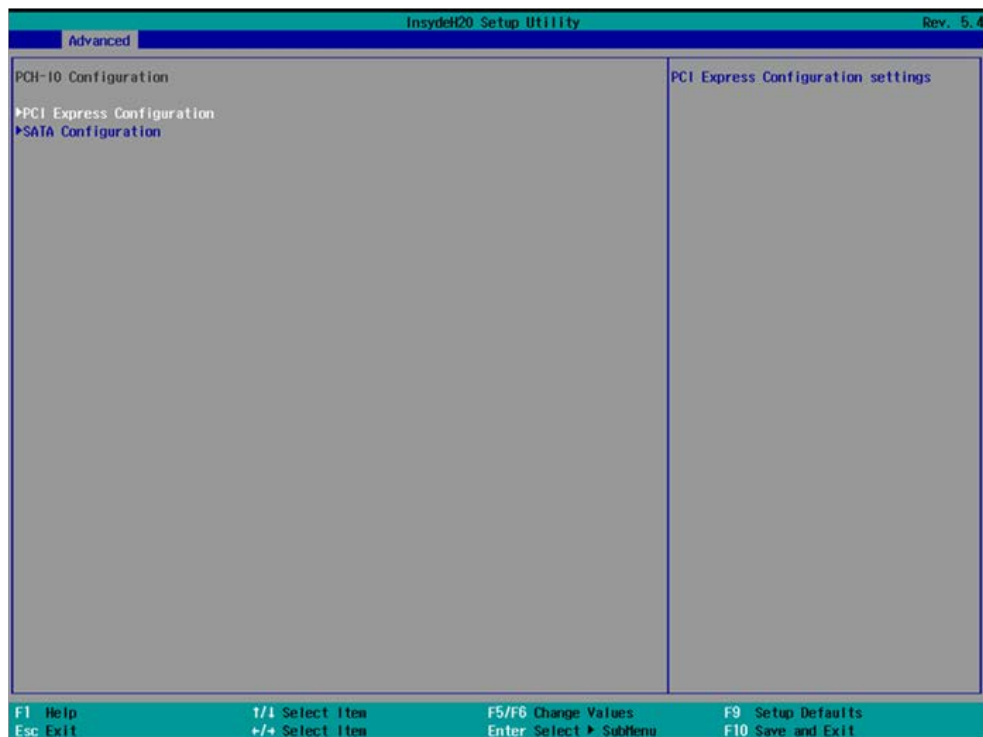


PCI Express Configuration


Please refer section 4-6-1-4-1


SATA Configuration

Please refer section 4-6-1-4-2

4-6-1-4-1 ► PCI Express Configuration

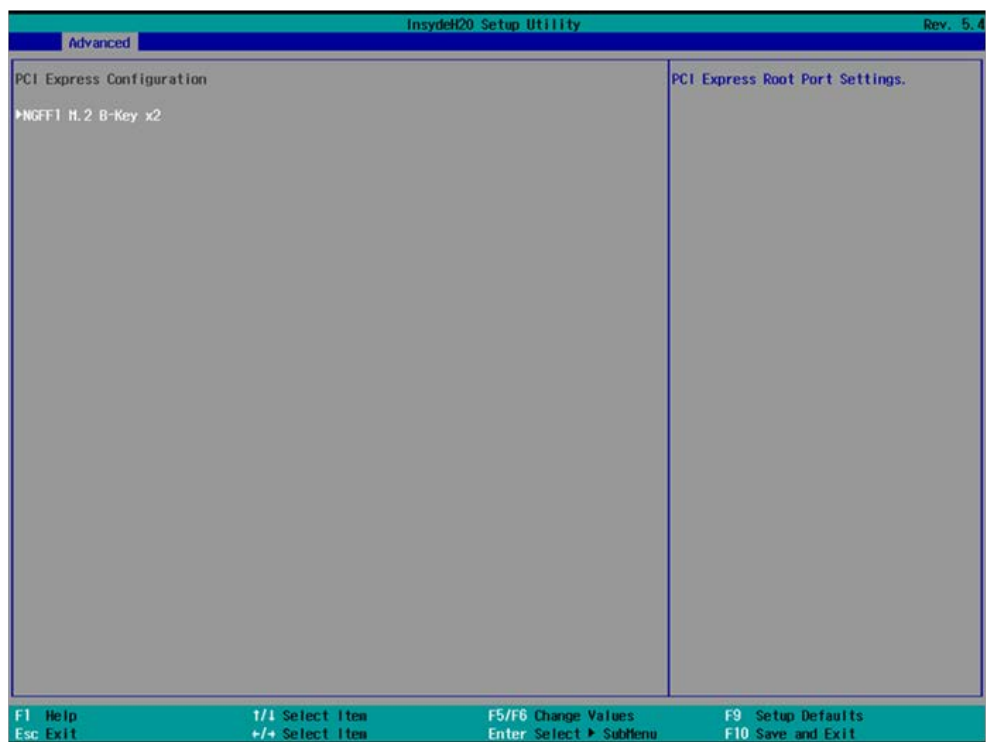


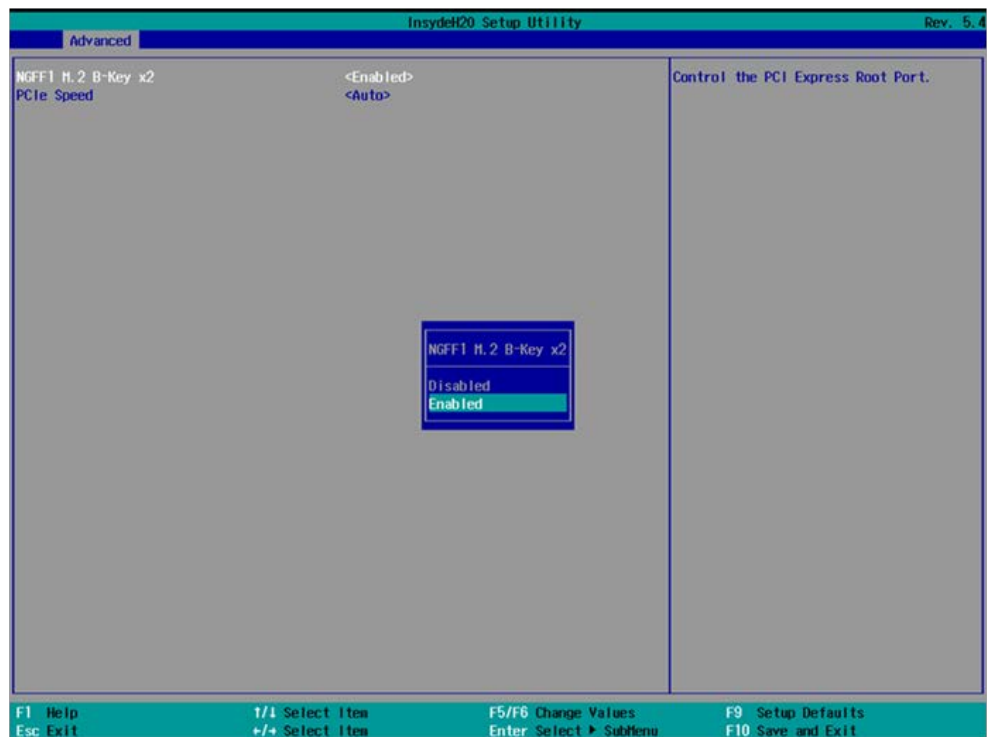


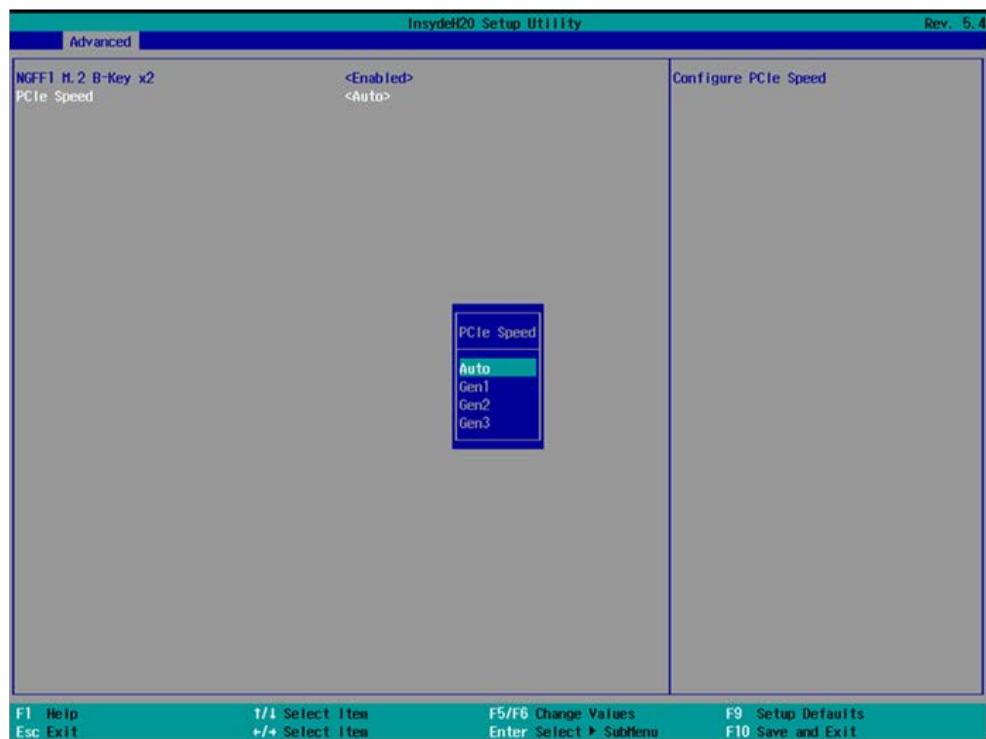

To select NGFF1 device enabled or not and to change the PCIe Speed, there are Auto, Gen1, Gen2, Gen3, default is Auto


4-6-1-4-2 ► SATA Configuration

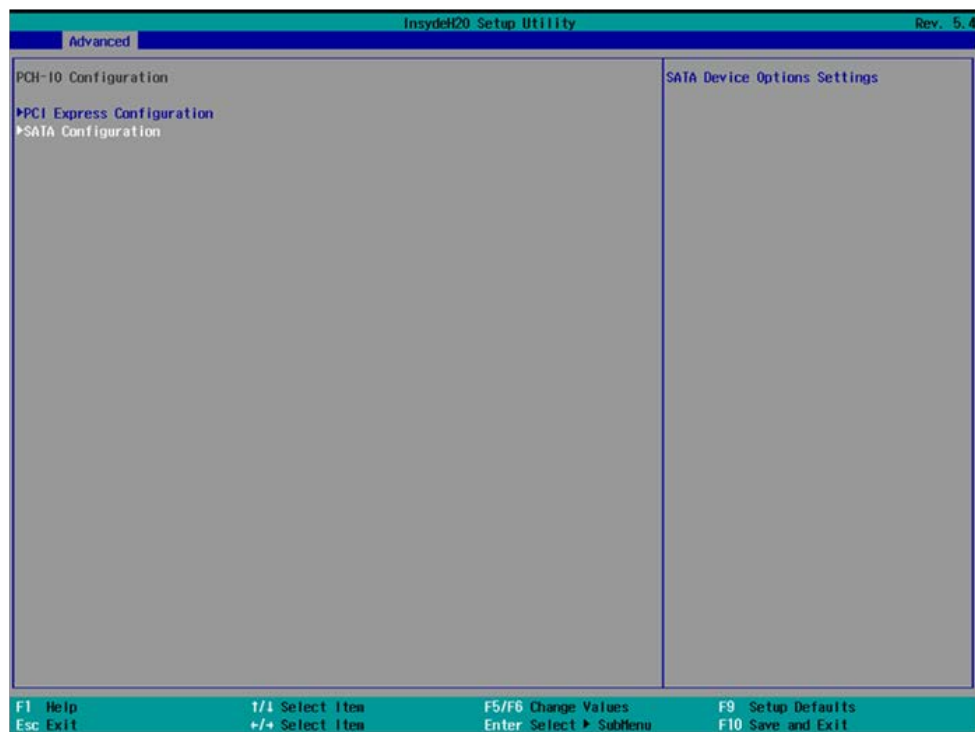

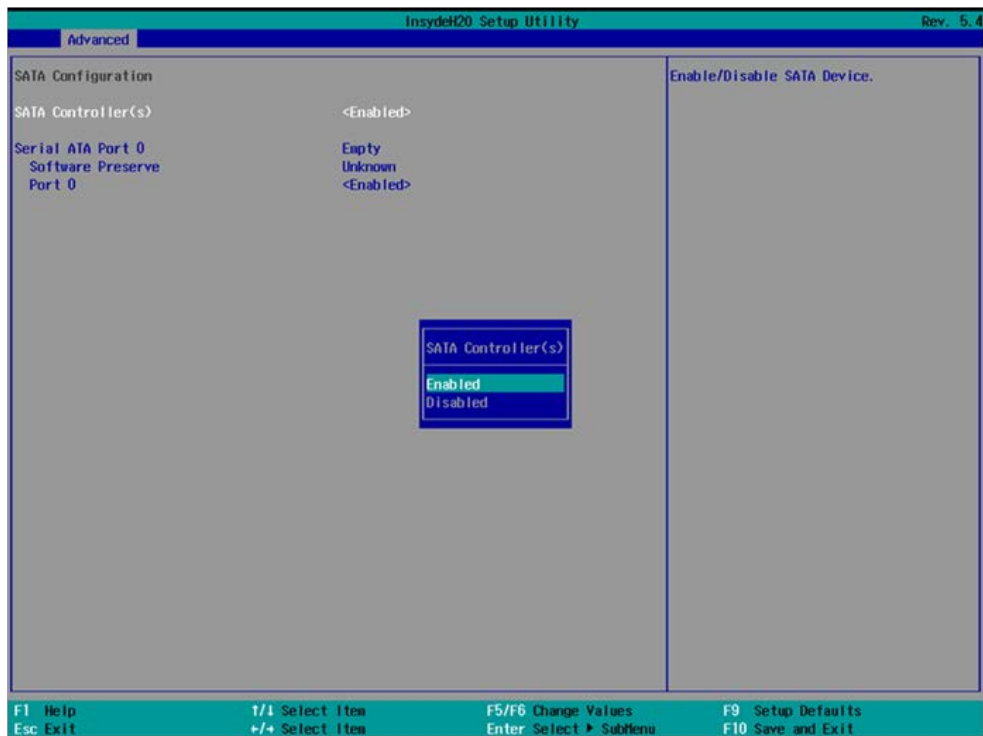

To select SATA device enabled or not.

4-6-1-5 ► PCH-FW Configuration

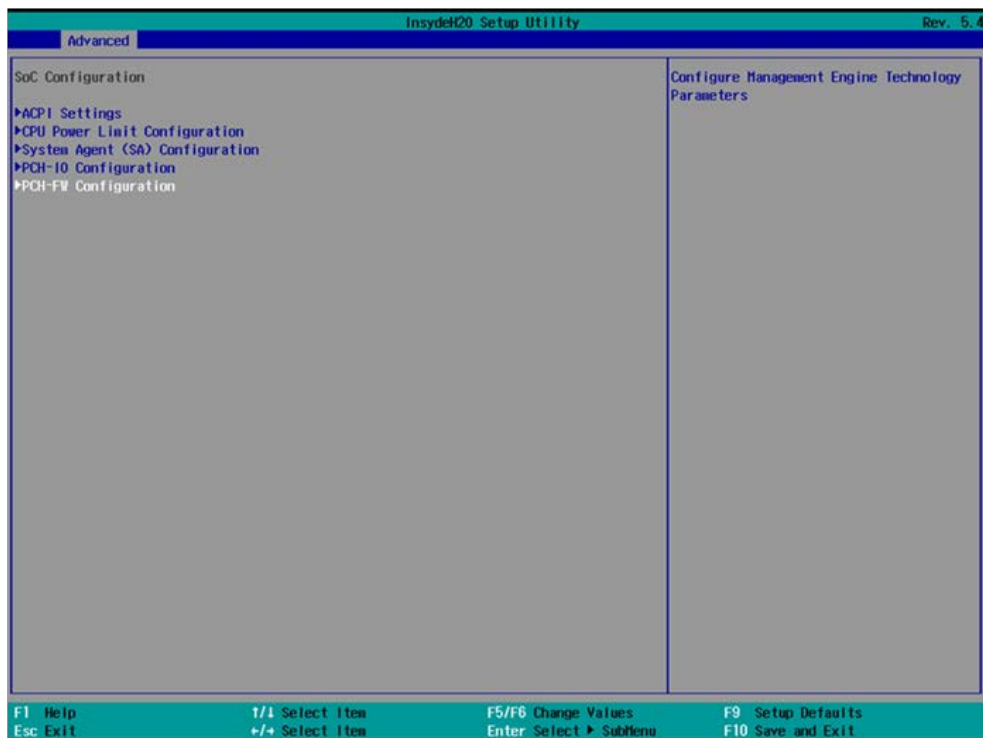

Advanced

ME Firmware Version	16.50.20.1647
ME Firmware Mode	Normal Mode
ME Firmware SKU	Consumer SKU
ME Firmware Status 1	0x90000255
ME Firmware Status 2	0x39850106
ME Firmware Status 3	0x00000020
ME Firmware Status 4	0x00004000
ME Firmware Status 5	0x00000000
ME Firmware Status 6	0x00400002

ME Firmware Version

F1 Help

↑/↓ Select Item

F5/F6 Change Values

F9 Setup Defaults


Esc Exit


←/→ Select Item

Enter Select ► SubItems

F10 Save and Exit

4-6-2 Boot Configuration

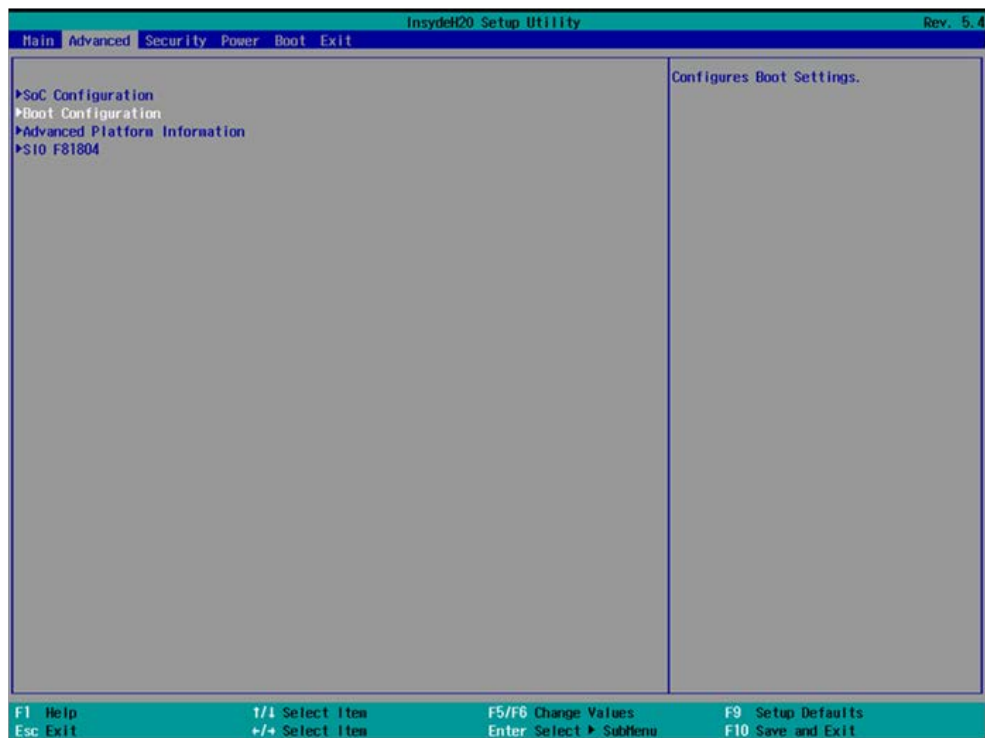


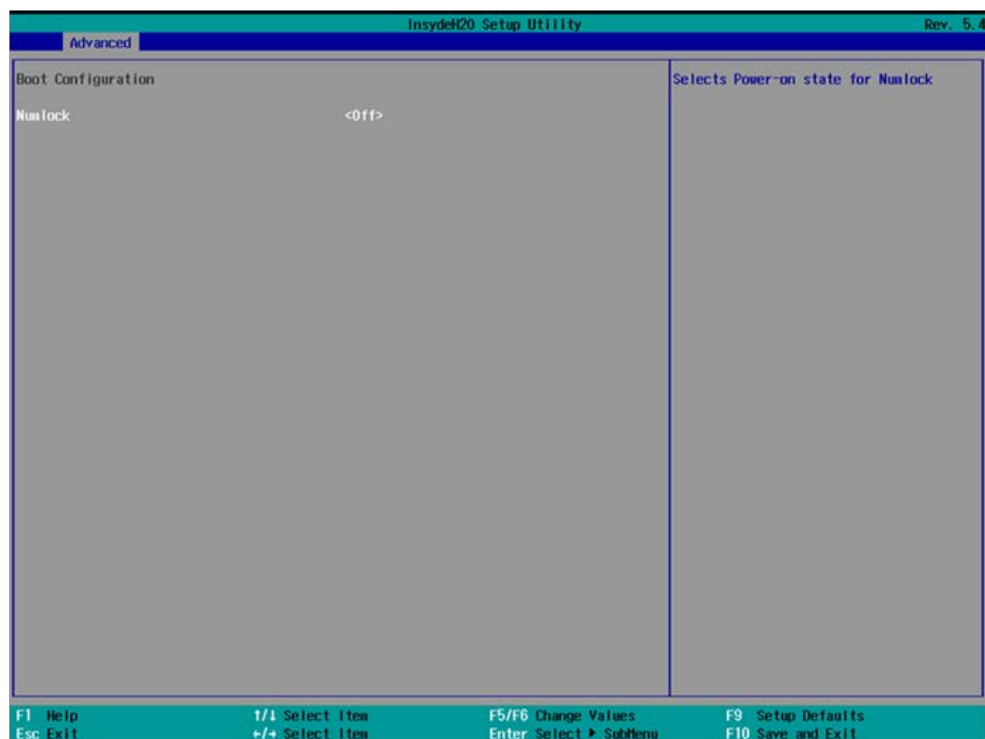


To select Power-on state for NumLock, default is <off>

4-6-3 Advanced Platform Configuration


SATA Drive Information

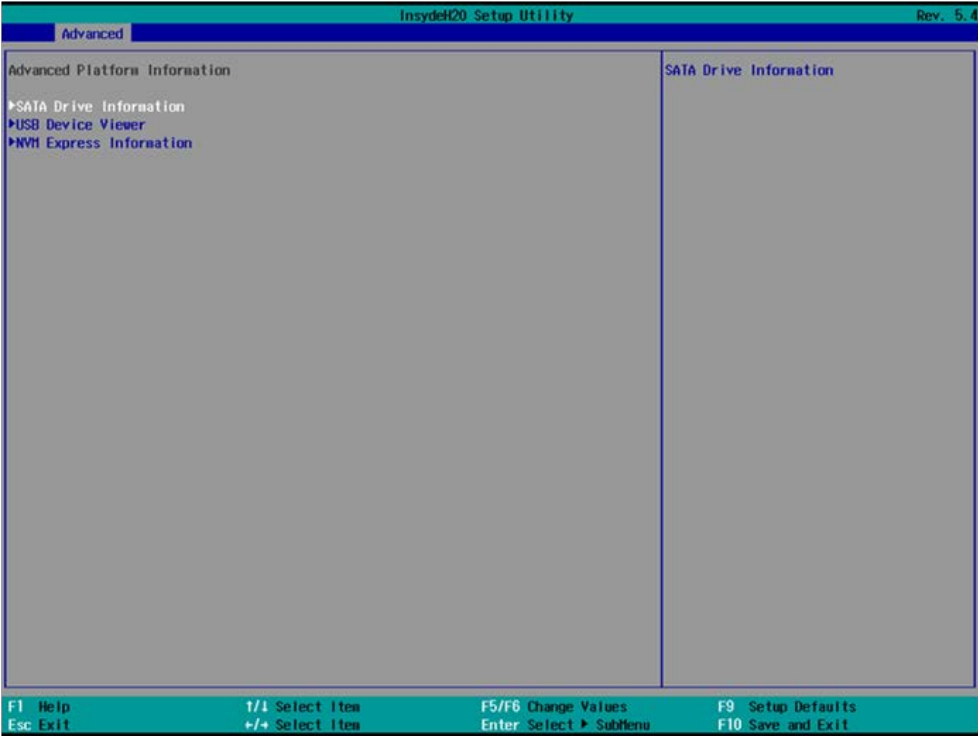


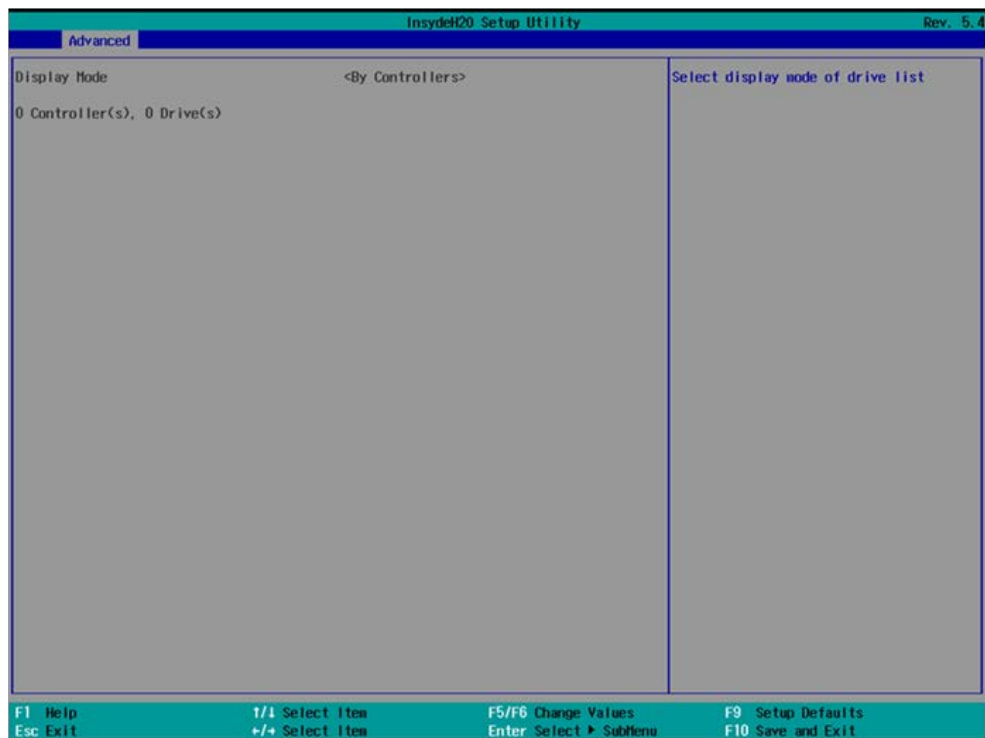

Shows SATA Drive information


USB Device Viewer

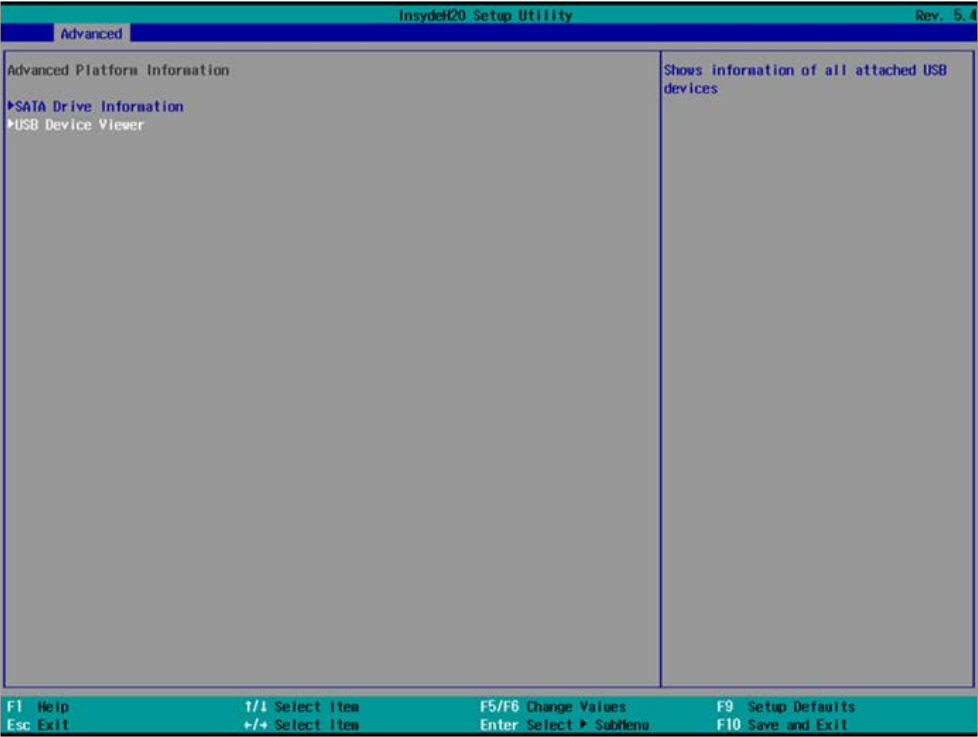

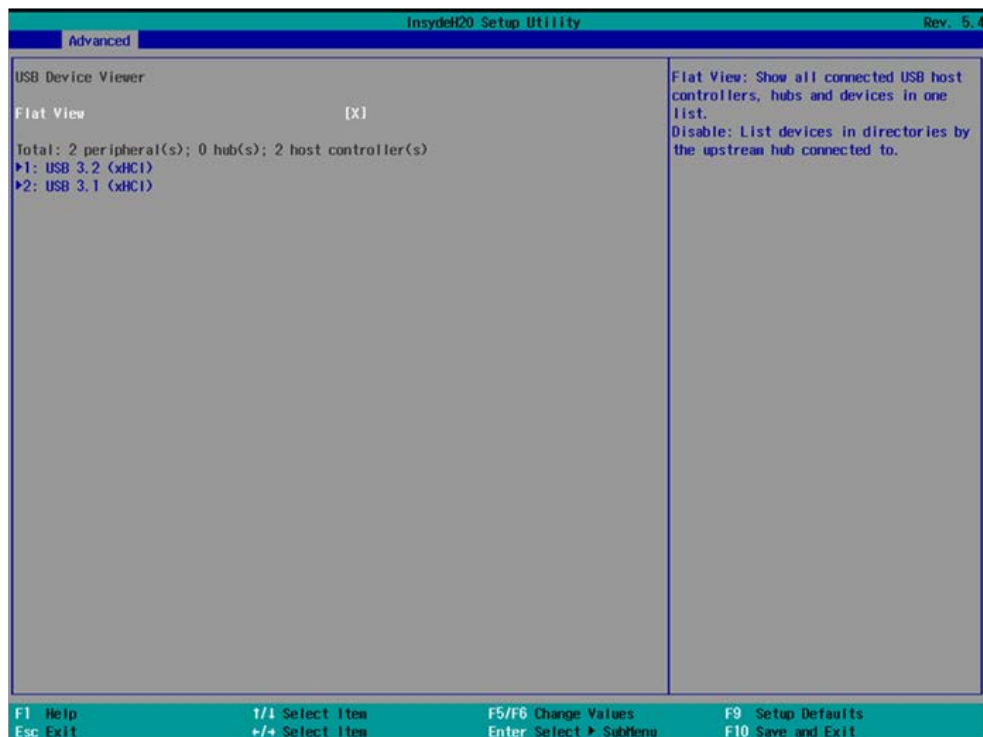

Shows USB Drive information


NVM Express Information

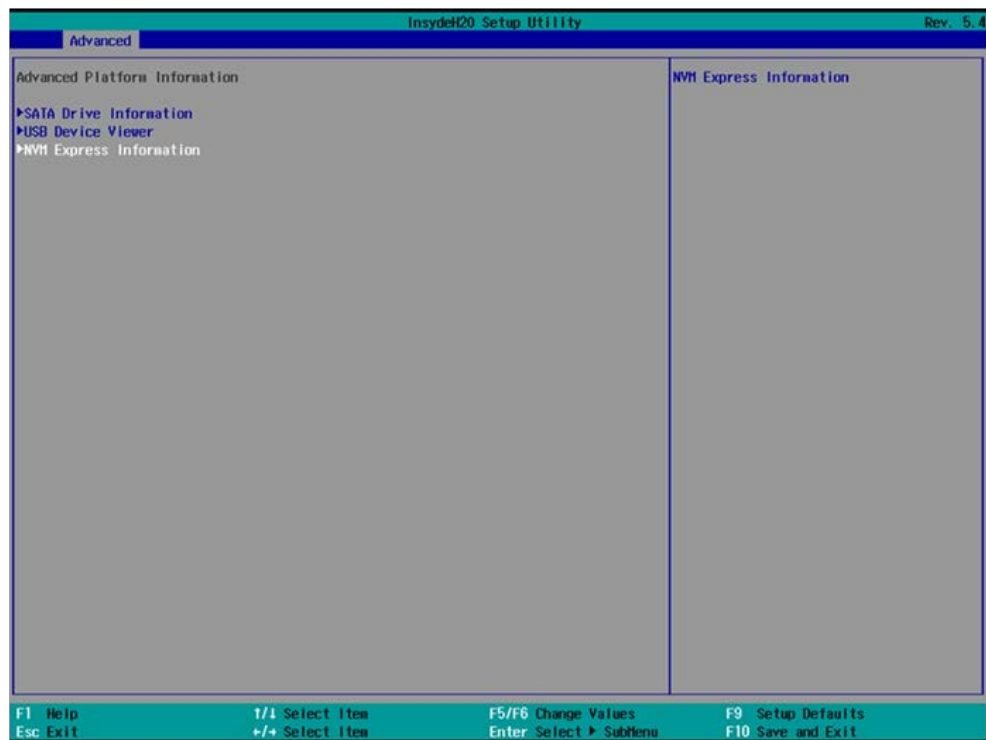



Shows NVMe Device information

4-6-4 SIO F81804

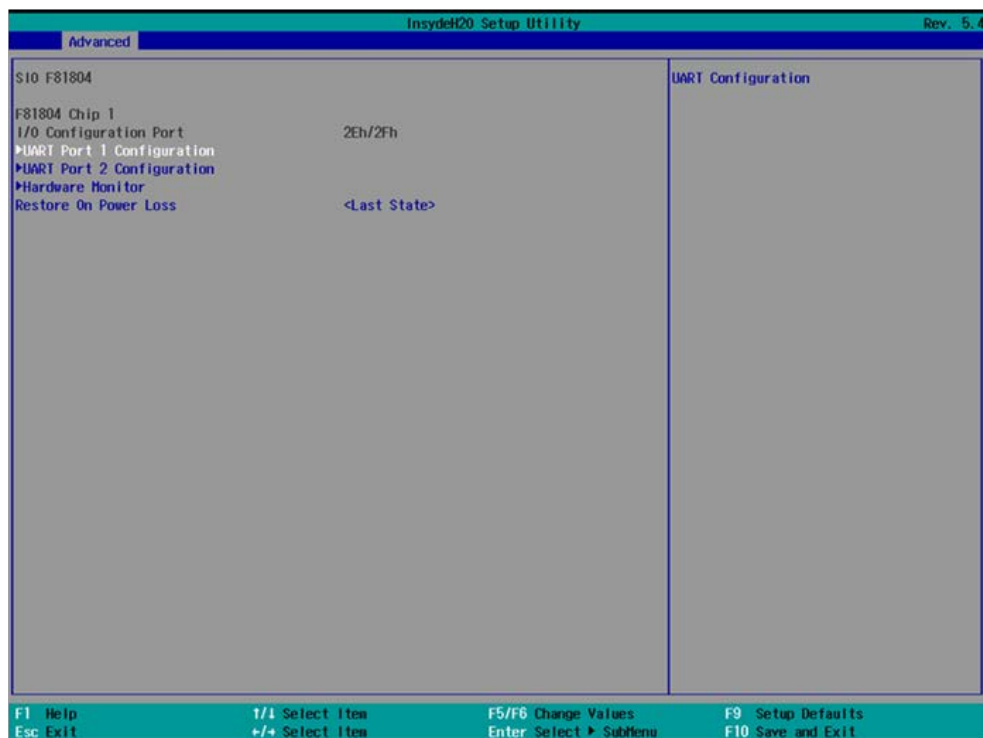

UART Port 1 Configuration

Please refer section 4-6-4-1

UART Port 2 Configuration

Please refer section 4-6-4-2


Hardware Monitor

Please refer section 4-6-4-3


Restore on Power Loss

Please refer section 4-6-4-4


4-6-4-1 ► UART Port 1 Configuration

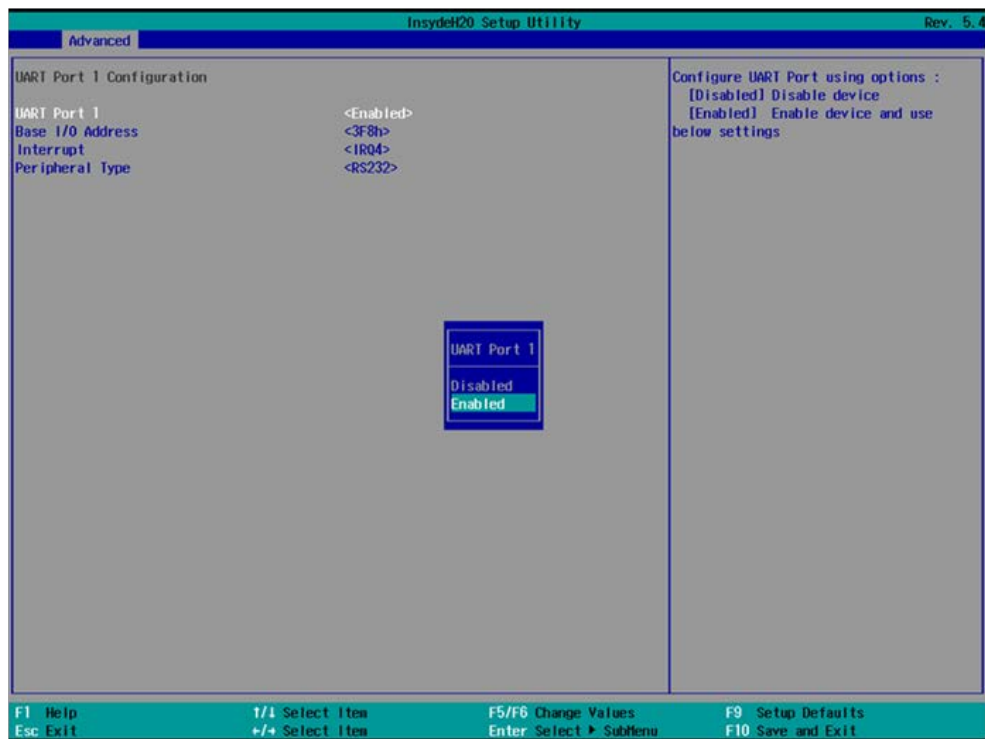


To Enable Serial port or not, default is Enabled.

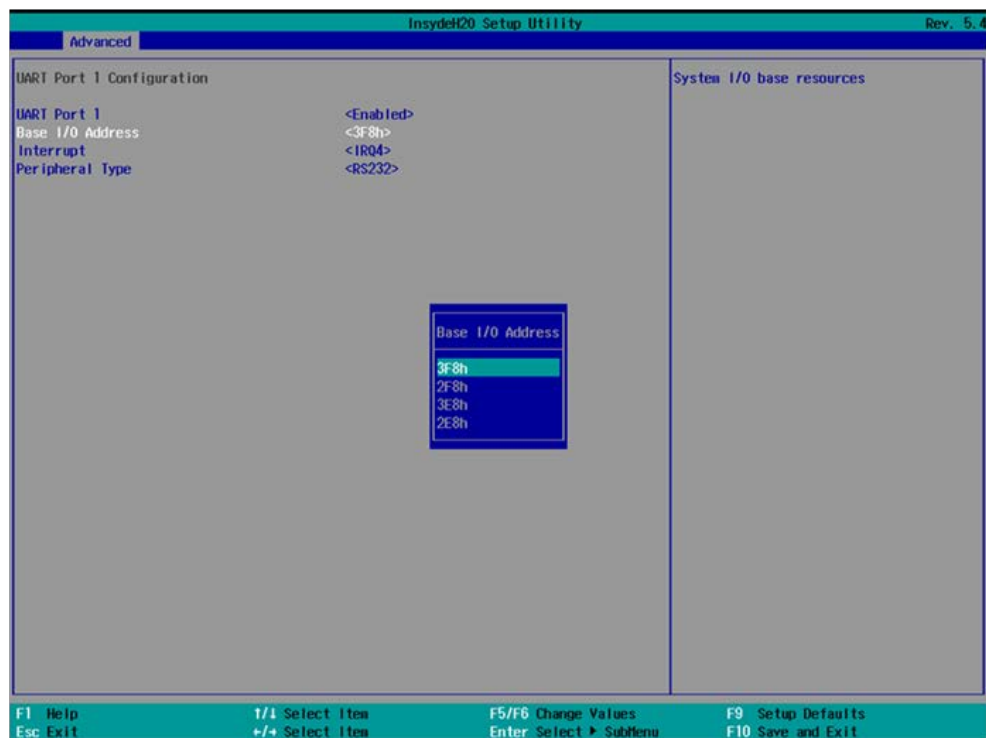

Base I/O Address, default is 3F8h.

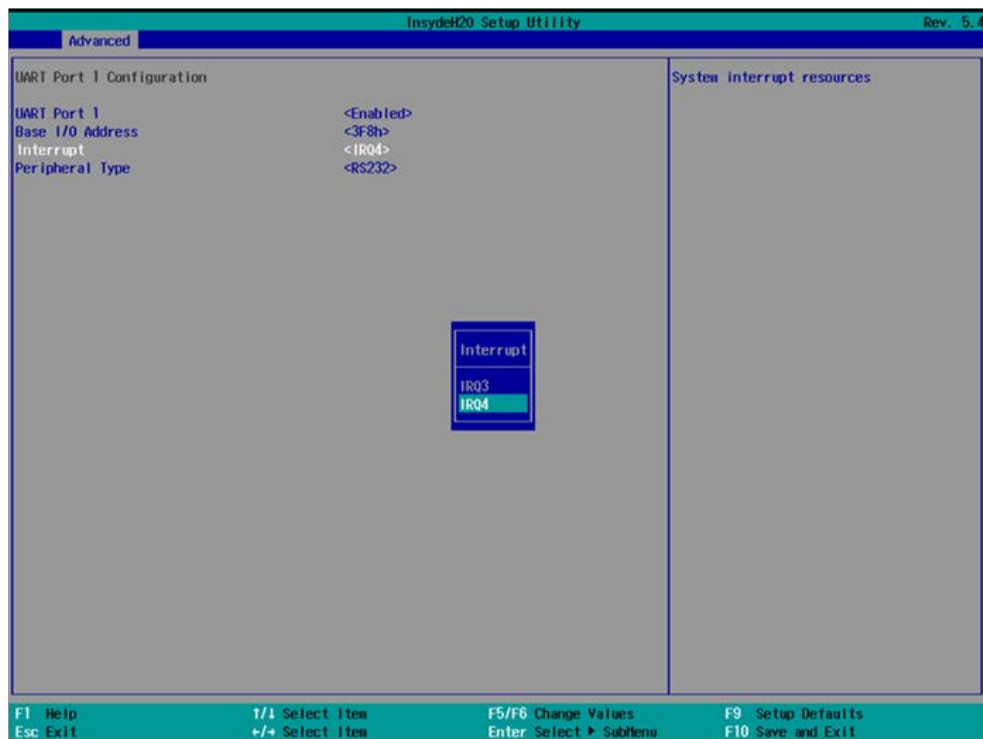


Interrupt, default is IRQ4.

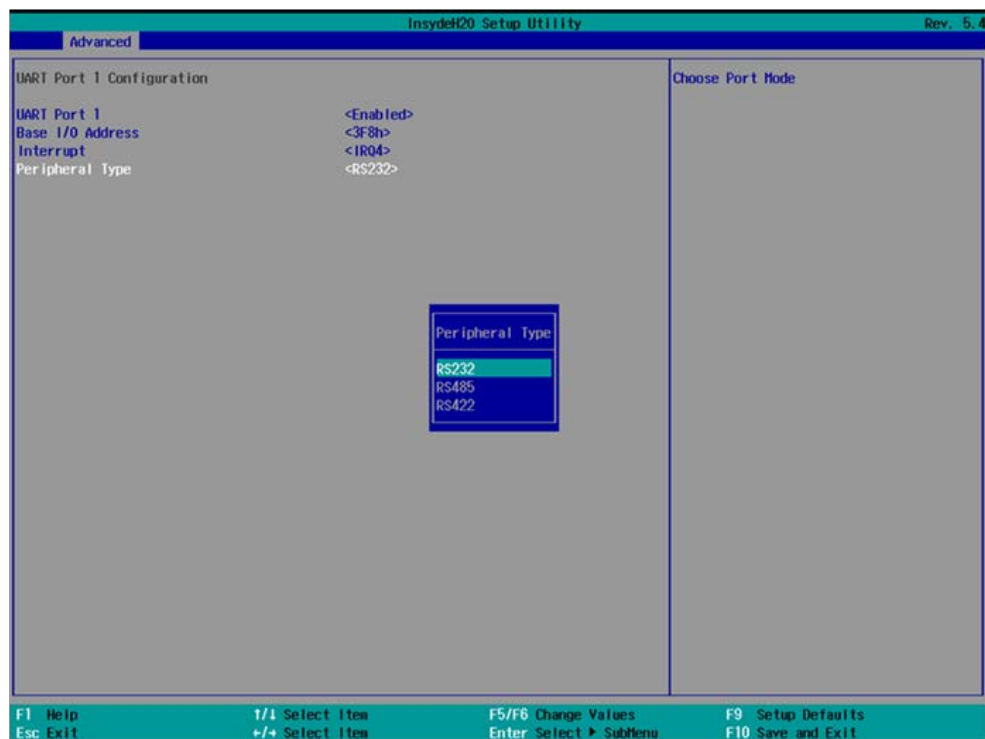


Peripheral, to select the Serial port to RS232/RS422/RS485, default is RS232.


4-6-4-2 ► UART Port 2 Configuration

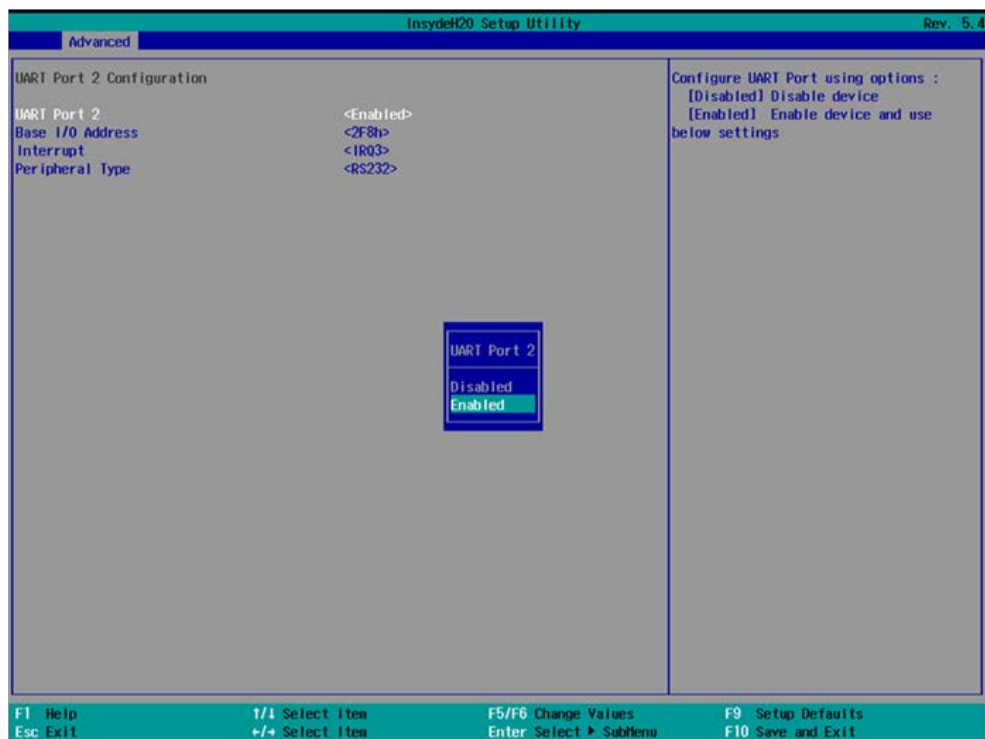


To Enable Serial port or not, default is Enabled.

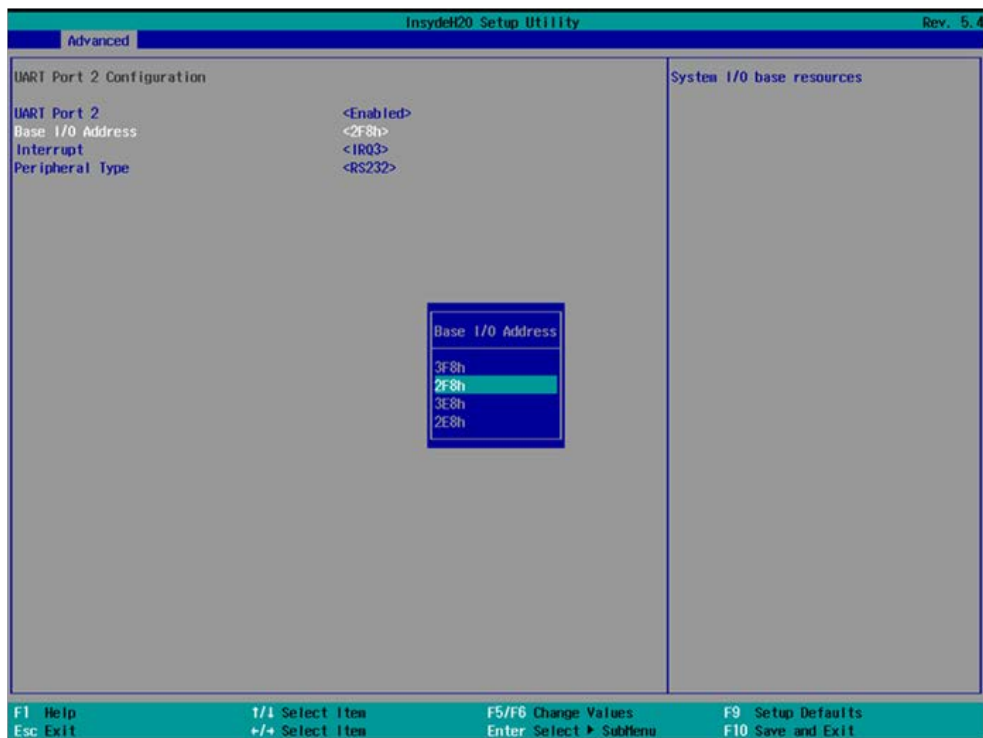

Base I/O Address, default is 2F8h.

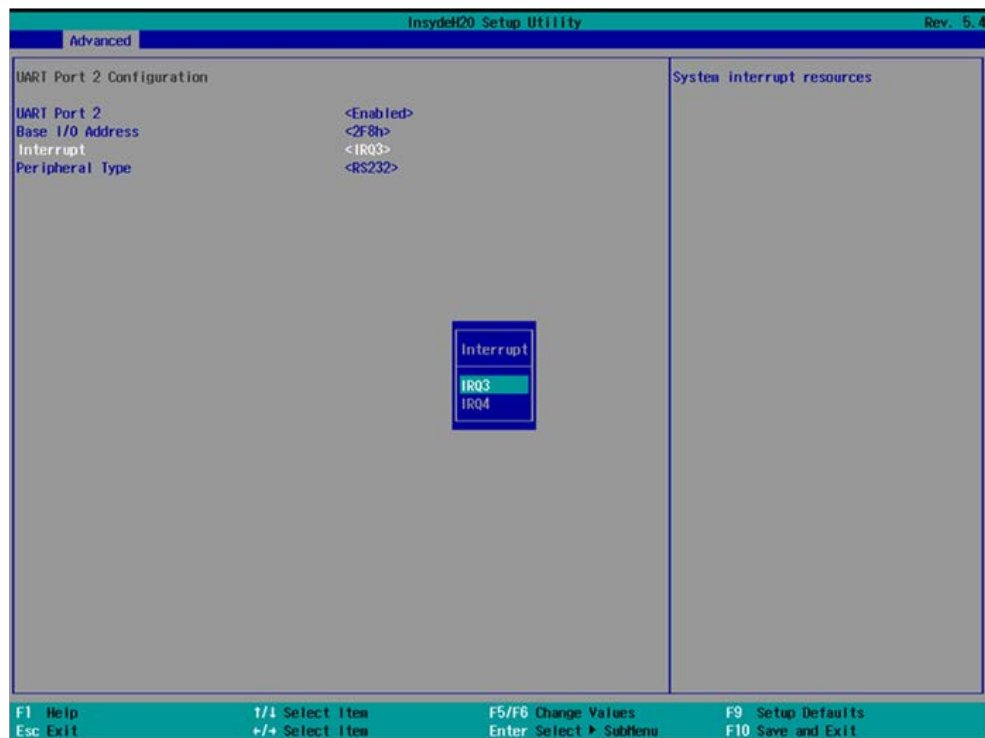


Interrupt, default is IRQ3.

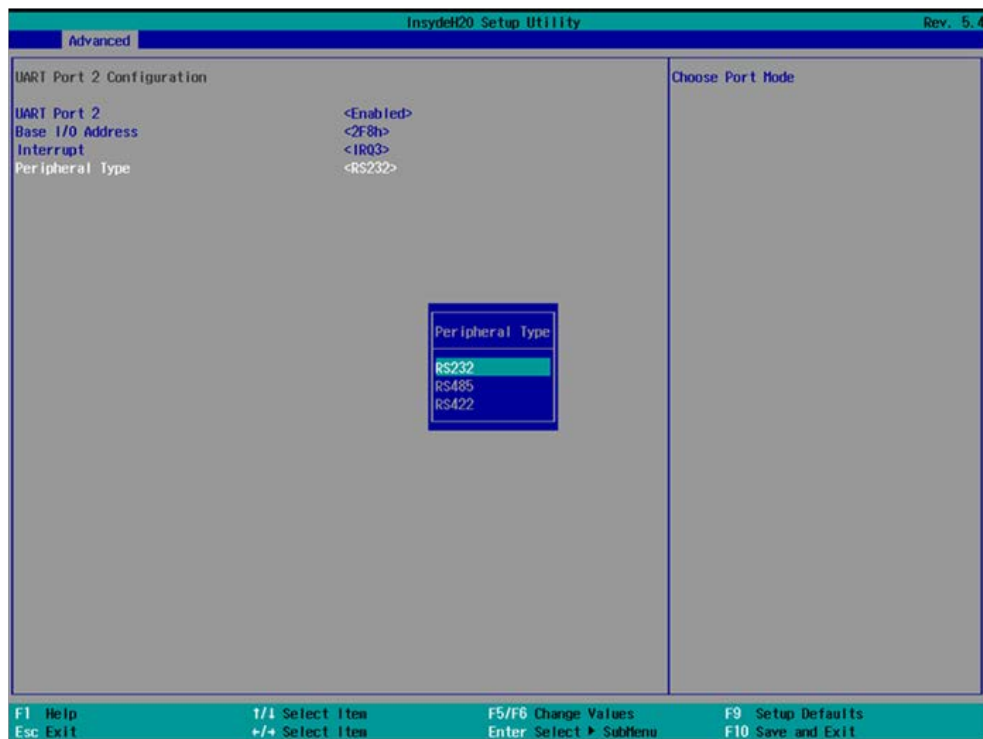

Peripheral, to select the Serial port to RS232/RS422/RS485, default is RS232.

4-6-4-3 ► Hardware Monitor

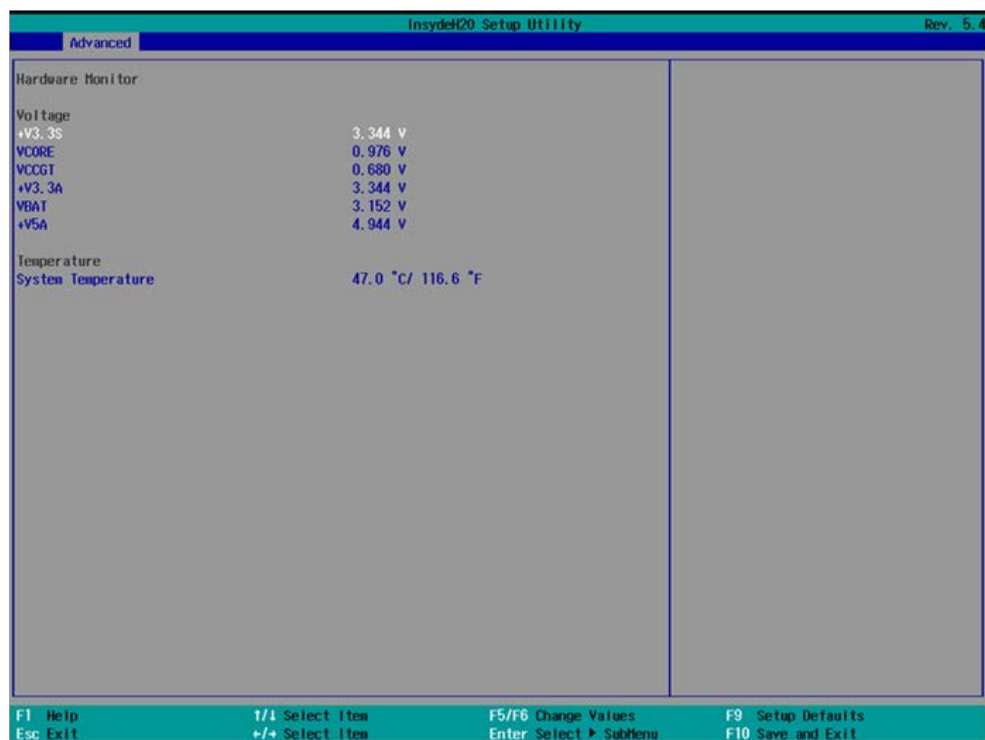


Press [Enter] to view PC health status.

This section shows the status of your CPU, Fan, and overall system.


This is only available when there is Hardware Monitor function onboard.

4-6-4-4 Restore On Power Loss

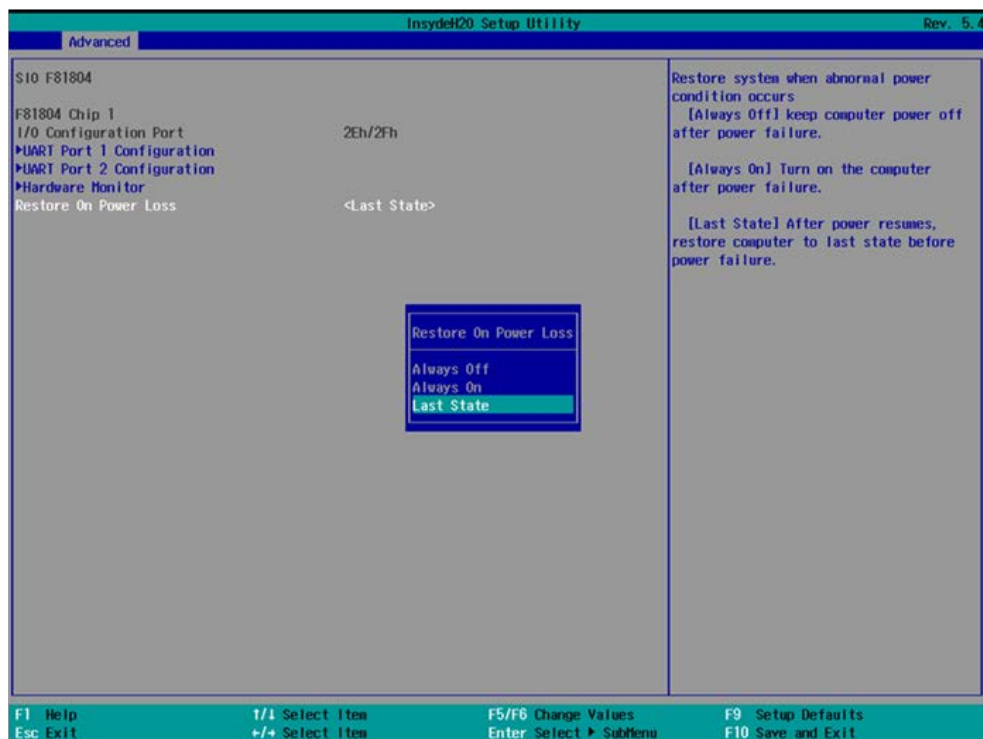


To select the power behavior after power fail, default is Last State.


4-7 Security

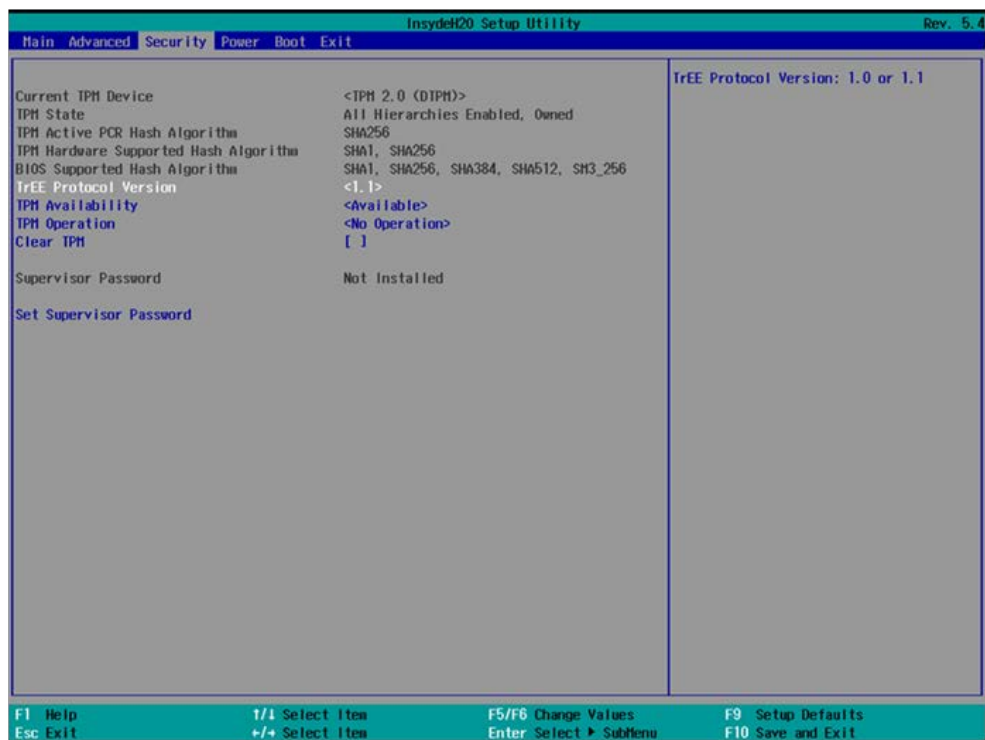


TrEE Protocol Version There are 1.0 and 1.1 versions.

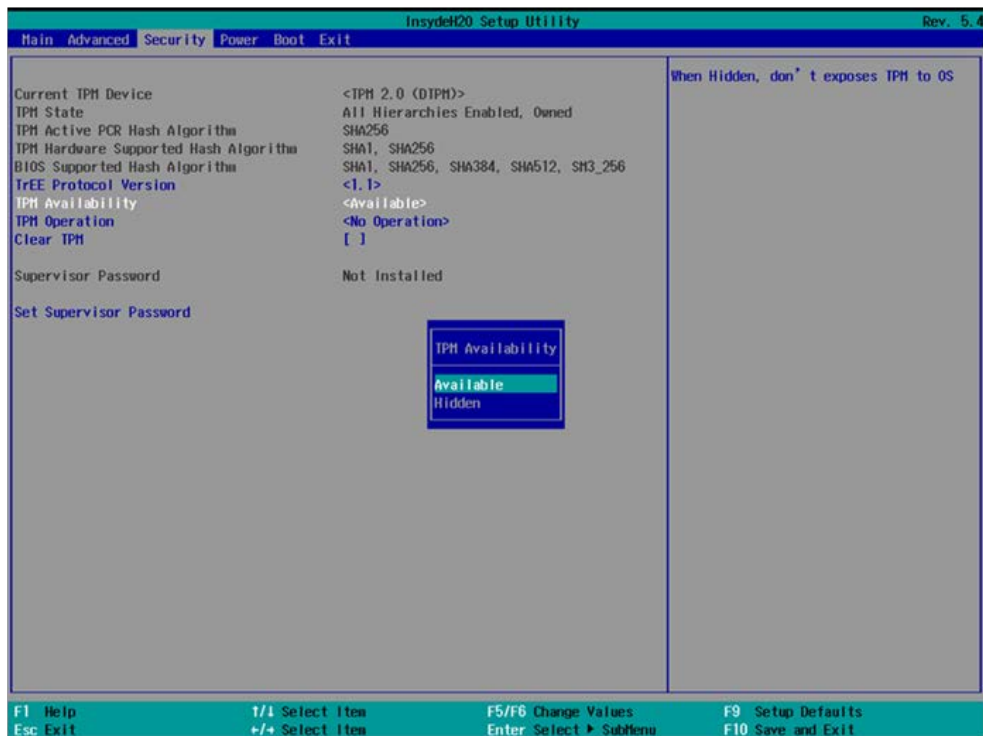

TPM Availability To select TPM available or hidden

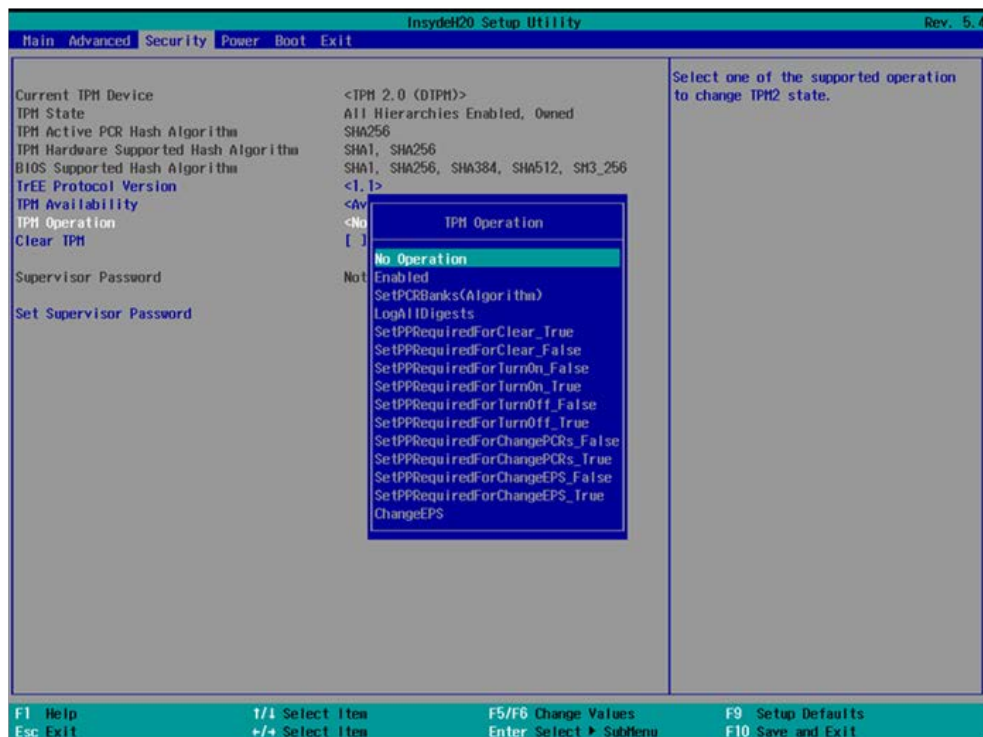


TPM Operation To select TPM operations
Set Supervisor Password

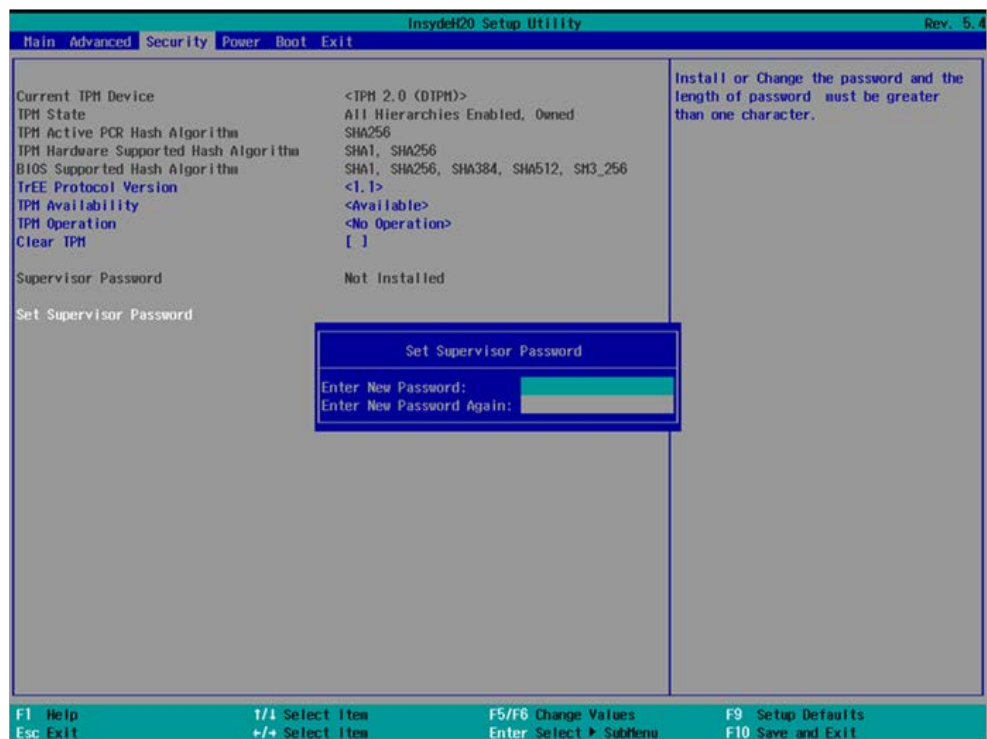


To set up the Supervisor password

4-8 Power

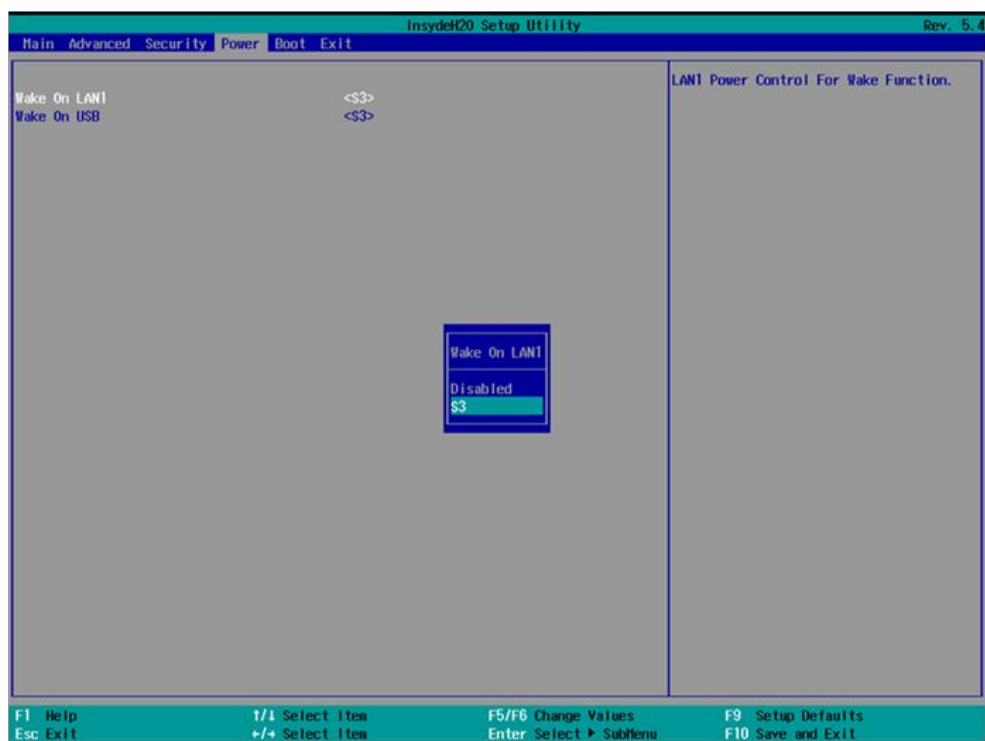


Wake On LAN1 To select S3 wake on LAN1, default is S3.

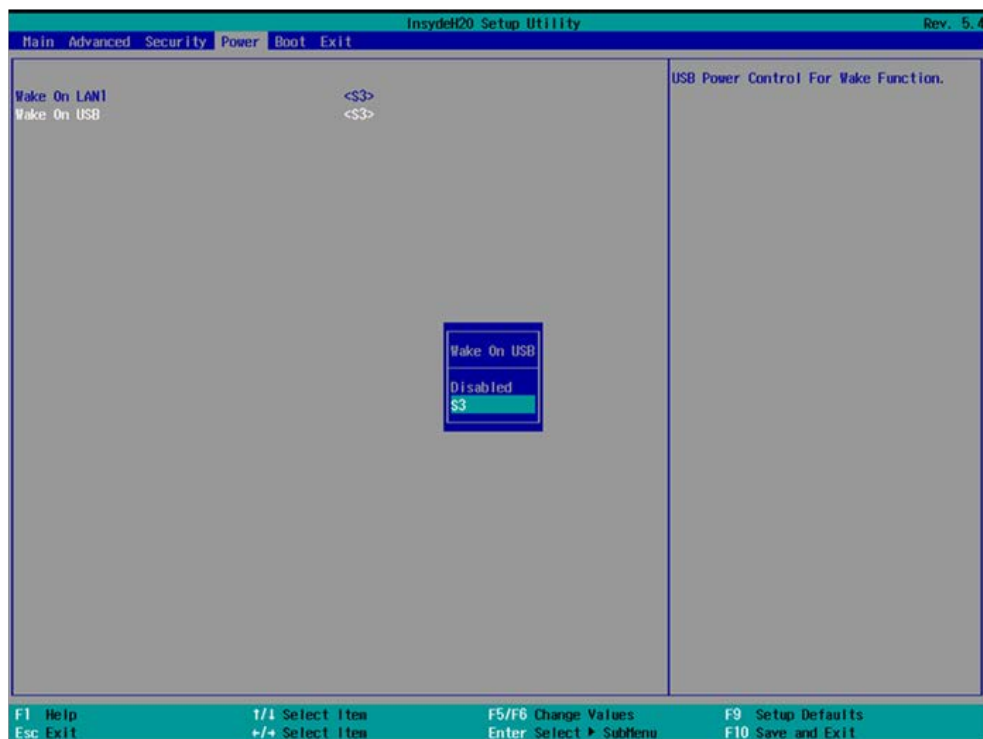

Wake On USB To select S3 wake on USB, default is S3.

4-9 Boot

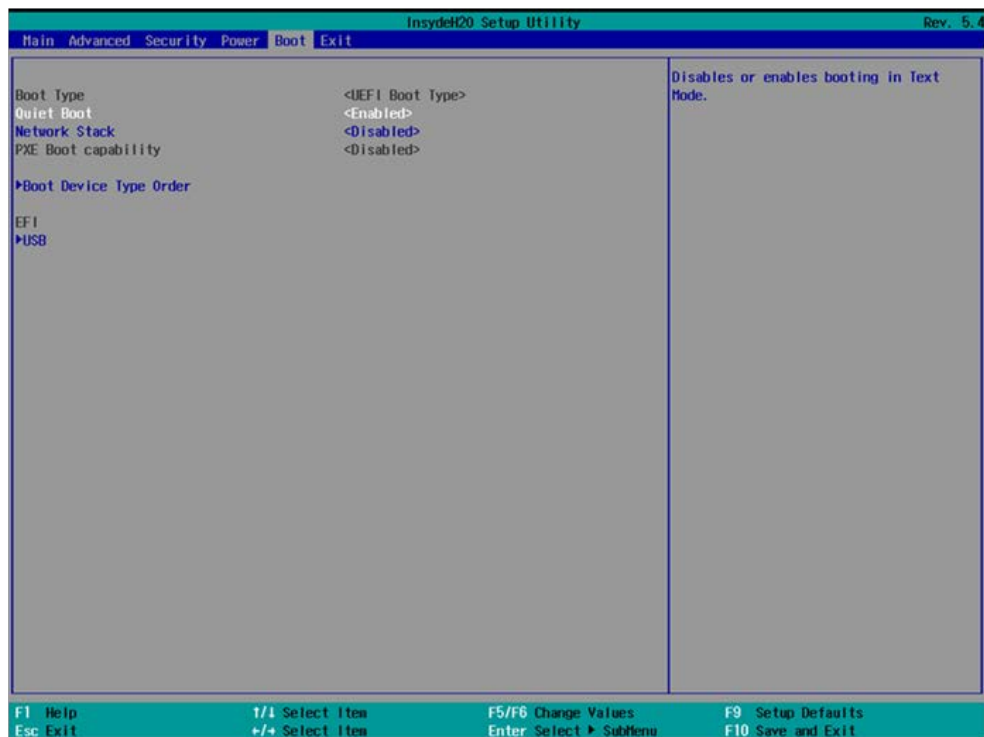


Quiet Boot

The optional settings are: Enabled(default), Disabled.

Network Stack

The optional settings are: Enabled, Disabled(default).

4-10 Save & Exit

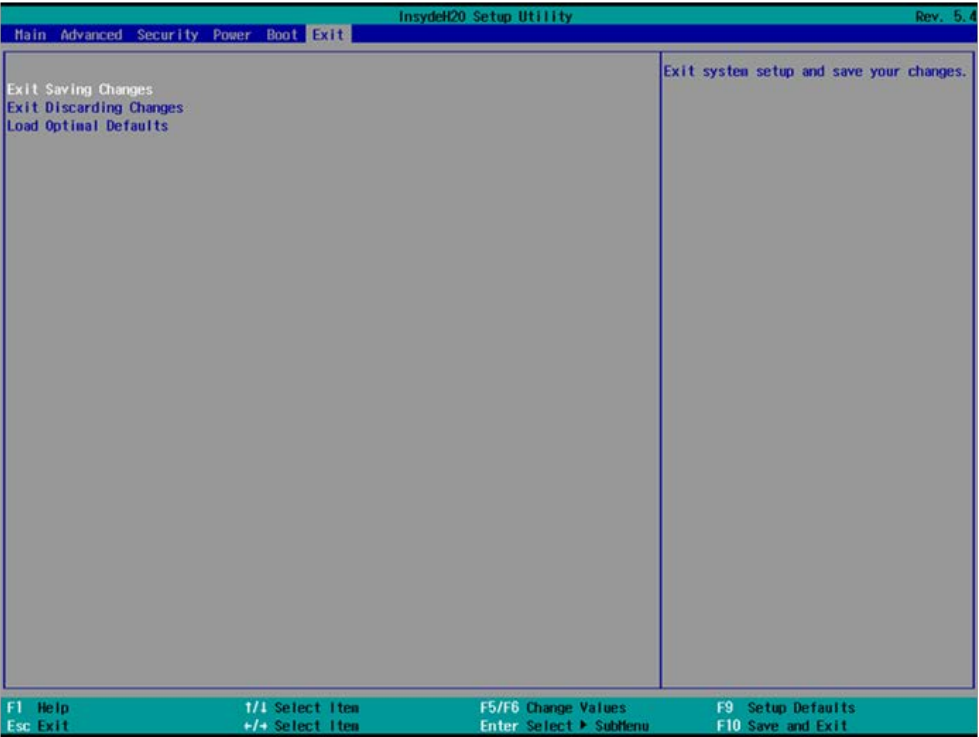

Exit Saving Changes

Save configuration and reset

Exit Discarding Changes

Reset without saving the changes

Load Optimal Defaults

To restore the optimal default for all the setup options

4-11 How to update Insyde BIOS

Under DOS Mode

STEP 1. Prepare a bootable disc.

(Storage device could be USB FDD or USB pen drive.)

STEP 2. Copy utility program to your bootable disc. You may download it from our website.

STEP 3. Copy the latest BIOS for your LEX motherboard from our website to your bootable disc.

STEP 4. (Here take 2I740DW as an example, please enter your motherboard's name)

Insert your bootable disc into X: (X could be C:, A: or others.

It depends on which type of storage device you use.)

Start the computer and type

X:\: H2OFFT-D.EXE 2I740DWA2.ROM -BIOS -ALL

2I740DWA2.ROM is the file name of the latest BIOS.

It may be 2I740DWA1.ROM or 2I740DWA2.ROM, etc.

Please leave one space between .ROM & -BIOS -ALL

By Bay Trail series mainboard, please type

X:\: H2OFFT-D.EXE 2I740DWA2.ROM -BIOS -ALL

-BIOS : Flash BIOS region

-ALL : Flash all

STEP 5. Press ENTER and the BIOS will be updated,
Computer will restart automatically.

Appendix B: Resolution list

640 x 480 x (256 / 16bit / 32bit)
800 x 600 x (256 / 16bit / 32bit)
1024 x 768 x (256 / 16bit / 32bit)
1152 x 864 x (256 / 16bit / 32bit)
1280 x 600 x (256 / 16bit / 32bit)
1280 x 720 x (256 / 16bit / 32bit)
1280 x 768 x (256 / 16bit / 32bit)
1280 x 800 x (256 / 16bit / 32bit)
1280 x 960 x (256 / 16bit / 32bit)
1280 x 1024 x (256 / 16bit / 32bit)
1400 x 1050 x (256 / 16bit / 32bit)
1440 x 900 x (256 / 16bit / 32bit)
1600 x 900 x (256 / 16bit / 32bit)
1600 x 1200 x (256 / 16bit / 32bit)
1680 x 1050 x (256 / 16bit / 32bit)
1920 x 1080 x (256 / 16bit / 32bit)
1920 x 1200 x (256 / 16bit / 32bit)